


# Single-Axis Teaching Loader Cable Installation Guide

This Single-Axis Positioning Unit Teaching Loader Cable (5m) is connected to the (FN-LD10CBL) Flex Network Single-Axis Positioning Unit (FN-PC10SK41) and to the Single-Axis Positioning Unit Teaching Loader (FN-PC10LD41). Be sure to connect the cable according to the connection example shown below.

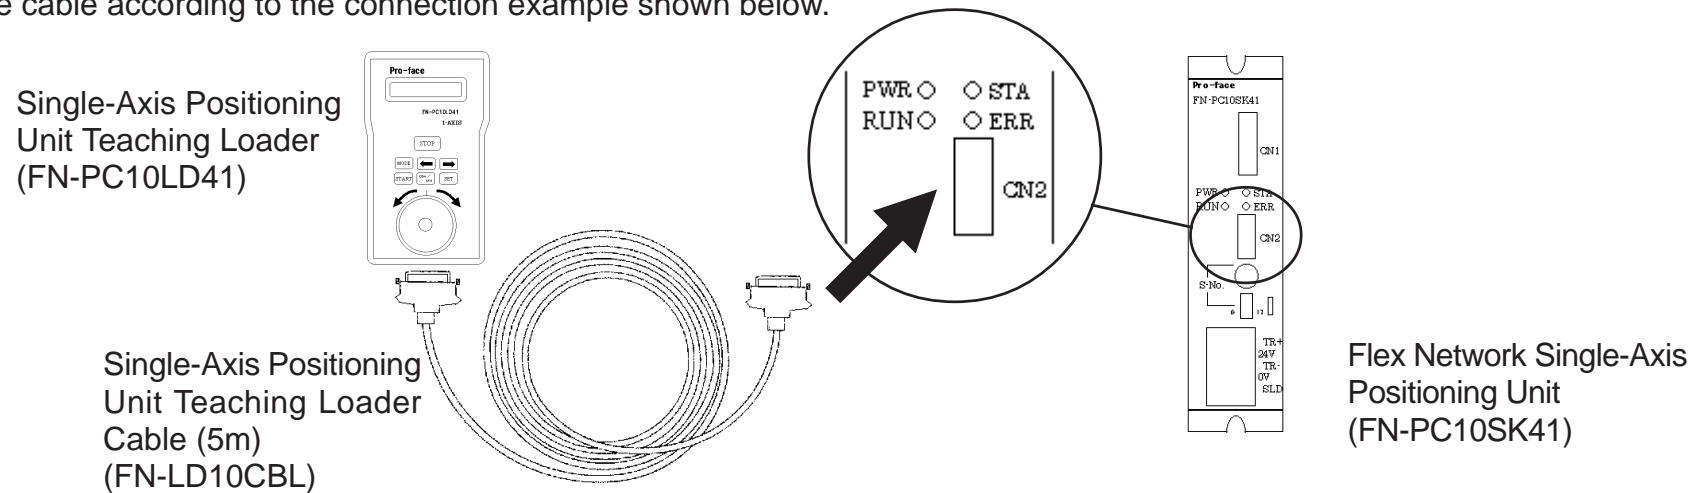

- Do not connect this cable within 100mm of high voltage or current lines, or near high frequency devices, such as inverters, etc. and live current lines.
- Do not strongly twist, bend or pull this cable, since it could cause unit or cable damage, or create a loose connection, which could, in turn cause a unit malfunction.

Please be aware that Digital Electronics Corporation shall not be held liable by the user for any damages, losses, or third party claims arising from the uses of this product.

Digital Electronics Corporation  
8-2-52 Nanko-higashi  
Suminoe-ku, Osaka 559-0031 JAPAN  
Tel: +81-(0)6-6613-1101  
Fax: +81-(0)6-6613-5888  
URL: <http://www.pro-face.com>