
Development Environment

This chapter explains the development environment of the GP-Pro EX and the package contents. A list of GP models supported by GP-Pro EX is also included.

| 3.1 | Package Content | 3-2 |
|-----|-----------------------|-----|
| 3.2 | Operating Environment | 3-3 |
| 3.3 | Supported Model List | 3-7 |

3.1 Package Content

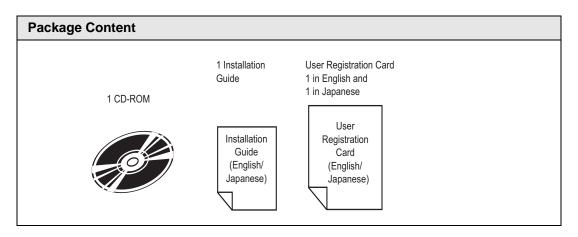

3.2 Operating Environment



• This product must be installed and configured by qualified software installation staff with administrator permissions.

NOTE

- Connect to the Internet for the online update feature and the online user registration.
- If you choose to change the installation destination folder for the main product, please input the folder name in your computer's OS language. If you input text that is not in your OS language, GP-Pro EX will not function properly.

3.2.1 Required for GP-Pro EX Operating environment

| | Required Specific | cations | Remarks |
|---------------------|---|--|---|
| PC | A PC/AT compatible machine on which Windows® operates normally | | |
| CPU | Pentium [®] III 800 MHz or faster | | Pentium [®] 4 1.3 GHz or faster is recommended |
| Operating System | Windows [®] 2000 (Service Pack 3 or later), Windows [®] XP (Home Edition or Professional) | | |
| Resolution | SVGA 800x600 or above is recommended. (Display with 256 or more colors is required) | | |
| Memory | 512 MB or more | | 1 GB or more is recommended. |
| Hard Disk Space | 400 MB or more | | This capacity is required to install Movie Converter. |
| Others | .NET Framework Ver.1.1 (Service Pack 1) | | .NET Framework Ver.1.1 (Service Pack 1 Service Pack 1) or later automatically installs on a PC without it. |
| | Internet Explorer Ver.6.0 or later | | |
| | Adobe [®] Reader [®] Ver.6.02 or later ^{*1} | | |
| Language | Software Menu Languages that the GP can Display | English, Japanese Japanese, ASCII supported, Korean, Chinese (Traditional), Chinese (Simplified), Cyrillic, Thai | To use any language other than Japanese or Latin-based languages, you need to add the corresponding fonts and FEP. F "A.4 Drawing Using Other Languages" (page A-68) |
| Each Language's FEP | Those supported by the above operating systems | | |
| CD drive | Those supported by the above operating systems | | Use during installation. |
| Mouse | Those supported by the above operating systems | | Required. |
| Printer | Those supported by the above operating systems | | |

Continued

| | Required Specifications | Remarks |
|---------------|---|--|
| USB Port | Required when transferring data via USB cable. • USB Transfer Cable Pro-face AGP-USBCB-01 (sold separately) | |
| | Required when transferring and saving data on a USB storage device. | |
| LAN port | Required when transferring data via Ethernet. • LAN cable (sold separately) • HUB | |
| CF Card drive | When doing CF Card transfers or reading and writing to a CF Card, a CF Card reader and a PCMCIA conversion card are required. • Pro-face CF Card (sold separately) | If you use commercially available CF-cards, we are under no warranty for their function. |

^{*1} Depending on your version of Adobe ** Reader**, the GP-Pro EX Manual may not display correctly.

For information, refer to "Otasuke Pro's Q&A". http://www.pro-face.com/otasuke/

3.2.2 Transfer Tool Installation Requirements

The installation requirements when installing only the transfer tools is as follows. Orientation ** "33.10.5 Installing the Transfer Tool" (page 33-68)

| | Required Specifications | Remarks |
|--|--|--|
| PC | A PC/AT compatible machine on which Windows [®] operates normally | |
| CPU | Pentium [®] II 266 MHz or faster is recommended | |
| Operating System | Windows 98 Second Edition or higher Windows ME Windows 2000 SP3 or higher Windows XP Home or Professional | Supports Japanese and English. |
| Memory | 128 MB or more | 512 MB + recommended. |
| Hard Disk Space | 60 MB or more | Required to install Movie Converter. |
| CD drive | Those supported by the above operating systems | Use during installation. |
| Mouse | Those supported by the above operating systems | Required. |
| Printer | Those supported by the above operating systems | |
| USB Port | Required when transferring data via USB cable. • USB Transfer Cable Pro-face AGP-USBCB-01 (sold separately) Required when transferring and saving data on a USB storage device. | |
| LAN port | Required when transferring data via Ethernet. • LAN cable (sold separately) • HUB | |
| Environment that supports modem connections (when transferring via modem) | Windows [®] compatible modem. | AT commands must be supported. Modems that need to be connected to the center cannot be used. |
| CF Card drive | When doing CF Card transfers or reading and writing to a CF Card, a CF Card reader and a PCMCIA conversion card are required. • Pro-face CF Card (sold separately) | If you use commercially available CF-cards, we are under no warranty for their function. |

3.3 Supported Model List

Below is a list of models supported by GP-Pro EX Version 2.0. This manual uses the following series and product names.

3.3.1 **GP3000 Series**

| Series Name | | Trade Name/Model Type | Model |
|-------------|---------|-----------------------|---------------------|
| GP3000 | GP-3200 | AGP-3200T | AGP3200-T1-D24 |
| | | AGP-3200A | AGP3200-A1-D24 |
| | GP-3300 | AGP-3300L | AGP3300-L1-D24 |
| | | AGP-3300S | AGP3300-S1-D24 |
| | | AGP-3300T | AGP3300-T1-D24 |
| | | AGP-3301L | AGP3301-L1-D24 |
| | | AGP-3301S | AGP3301-S1-D24 |
| | | AGP-3302B | AGP3302B-L1-D24 |
| | | AGP-3300L-D81 | AGP3300-L1-D24-D81K |
| | | | AGP3300-L1-D24-D81C |
| | | AGP-3300S-D81 | AGP3300-S1-D24-D81K |
| | | | AGP3300-S1-D24-D81C |
| | | AGP-3300T-D81 | AGP3300-T1-D24-D81K |
| | | | AGP3300-T1-D24-D81C |
| | | AGP-3300L-FN1M | AGP3300-L1-D24-FN1M |
| | | AGP-3300T-FN1M | AGP3300-T1-D24-FN1M |
| | GP-3400 | AGP-3400S | AGP3400-S1-D24 |
| | | AGP-3400T | AGP3400-T1-D24 |
| | | AGP-3450T | AGP3450-T1-D24 |
| | | AGP-3400S-D81 | AGP3400-S1-D24-D81K |
| | | | AGP3400-S1-D24-D81C |
| | | AGP-3400T-D81 | AGP3400-T1-D24-D81K |
| | | | AGP3400-T1-D24-D81C |
| | | AGP-3400T-FN1M | AGP3400-T1-D24-FN1M |

Continued

| Series Name | | Trade Name/Model Type | Model |
|-------------|---------|-----------------------|---------------------|
| GP3000 | GP-3500 | AGP-3500L | AGP3500-L1-D24 |
| | | AGP-3500S | AGP3500-S1-D24 |
| | | | AGP3500-S1-AF |
| | | AGP-3500T | AGP3500-T1-D24 |
| | | | AGP3500-T1-AF |
| | | AGP-3510T | AGP3510-T1-D24 |
| | | AGP-3550T | AGP3550-T1-AF |
| | | AGP-3560T | AGP3560-T1-AF |
| | | AGP-3500L-D81 | AGP3500-L1-D24-D81C |
| | | AGP-3500S-D81 | AGP3500-S1-D24-D81K |
| | | | AGP3500-S1-D24-D81C |
| | | | AGP3500-S1-AF-D81K |
| | | | AGP3500-S1-AF-D81C |
| | GP-3500 | AGP-3500T-D81 | AGP3500-T1-D24-D81K |
| | | | AGP3500-T1-D24-D81C |
| | | | AGP3500-T1-AF-D81K |
| | | | AGP3500-T1-AF-D81C |
| | | AGP-3500T-FN1M | AGP3500-T1-D24-FN1M |
| | | | AGP3500-T1-AF-FN1M |
| | GP-3600 | AGP-3600T | AGP3600-T1-D24 |
| | | | AGP3600-T1-AF |
| | | AGP-3650T | AGP3650-T1-AF |
| | | AGP-3600T-D81 | AGP3600-T1-D24-D81K |
| | | | AGP3600-T1-D24-D81C |
| | | | AGP3600-T1-AF-D81K |
| | | | AGP3600-T1-AF-D81C |
| | | AGP-3600T-FN1M | AGP3600-T1-D24-FN1M |
| | | | AGP3600-T1-AF-FN1M |
| | GP-3700 | AGP-3750T | AGP3750-T1-AF |

3.3.2 LT3000 SERIES

| Series Name | | Trade Name/Model Type | Model |
|-------------|---------|-----------------------|-----------------|
| LT3000 | LT-3200 | LT-3201A | LT3201-A1-D24-K |
| | | | LT3201-A1-D24-C |

3.3.3 IPC SERIES

| Series Name | | Trade Name/Model Type | Model |
|-------------|----|-----------------------|---------------------|
| IPC | PS | PS-3651A | PS3651A-T41 |
| | | PS-3650A | PS3650A-T41 |
| | | PS-3700A | PS3700A-T41-ASU-P41 |
| | | PS-2000B | PS2000B-41 |