

Index

Numerics

16 levels	9-34
16384 colors	9-34
256 colors	9-34
3-speed blink	9-34
4096 colors	9-34
65536 colors	9-34

A

address	
symbols	5-47
address action	25-94
address block conversion	5-88
address block display	17-19
address conversion pattern, changing device type using ..	7-22
address list	
confirm	5-27
display	5-28
address settings	5-97
addresses	
converting multiple	5-35
alarm	19-1
backup history	19-69
bit monitoring	19-20
direct selection	19-103
feature list	19-149
freeze mode	19-118
group	19-72
history	19-19, 19-30
list view	19-13
parts	19-89
printing history	19-143
settings	19-63
space requirements for history data	19-73
summary	19-72, 19-122
text	19-148
word monitoring	19-24
alarm file	
location	19-59
name	19-59
alarm history data	25-30
alarm language, changing	15-66
alarms	
displaying, scripts	20-17
align	
center	15-64, 15-65
fixed position	15-63
rows	15-63, 15-64, 15-65
API communication	37-160
application, triggering	21-67
attributes, change	5-62
attributes, changing	9-30
B	
backlight color settings	5-154

backup data, create	33-37
backup SRAM	19-73
backup SRAM capacity	5-82
banner display	19-72
bar code reader	8-2, 8-4
base screen, change	19-35
basic operations	5-1
bit logic system variables	A-85
bit operation examples	21-97
bit states	
16	13-13, 13-23
5	13-8
blink, setting up	9-37
blue-mode monochrome LCD	9-34
BMP/JPEG, pasting	9-64
buzzer	26-1, 26-7, 26-10
C	
call and display pictures	10-4, 10-11, 10-17
call screen	9-50, 9-51
calling a function	20-59
caution for saving to storage devices	19-61
CF Card	
cautions for saving to	24-136
cautions for use	5-167
copy to	33-29
handling precautions	24-137
initialize	33-37, 33-43
output folder	5-83
save cautions	5-166
setting folder	5-41
transfer project files using	33-36
CF Card Connection	33-28
CF card handling precautions	19-61
CF Card to USB memory	A-77
CF Card usage warnings	12-25
CF Card, handling precautions	25-117
CF file operation	21-35
change view	5-160
character code	
list, displaying characters not available in	9-76
table	9-72
character codes	6-6
clear area	16-26, 16-41
color	
codes	10-50
combinations	10-48
fill	9-10, 9-13, 9-15, 9-17, 9-22
palette	9-36
color code table	A-62
colors	
list of available	9-34
setting	9-34
command and status	19-58
command list	21-100

commands	21-1
common setting	5-99
common settings	5-153
communicating with multiple devices/PLCs	7-1
communication	
cycle time	A-21
error code	A-21
overview	A-2
communication state, confirming	7-14
compare memory	21-9
compare projects	33-25
comparison, conditions	21-75
compatibility	2-2
condition action	25-91
Condition Name Search Feature	25-100
conditional	
branch calculation examples	21-98
expressions	21-70
conditional expressions	20-48
control word address for data saving to storage device	19-58
conversion	
devices before and after	2-6
model names before and after	2-2
convert projects	2-2
coordinates, changing	9-33
copy memory	21-11, 21-14
copy tool	37-170
copying from other projects	5-92
creating reports	34-3
cross reference	5-91
cross references	5-28
CSV data	
display	25-81
displaying	25-30, 25-36
editing	25-40
flow	25-4
printing	25-41
transfer	25-56, 25-61, 25-89
CSV file, reading	21-51
CSV format	25-30
cursor shape	19-120

D

data	
add	11-10
buffer to internal device	21-87
changing values	14-37
comparison	11-13
display	14-1, 14-42
input	14-1
range, prevent entering data outside allowed	14-29
store mode	21-42
subtract	11-10
write	11-8
data block display	
displaying/clearing a graph	17-22
Data Block Display graph mechanism	17-59
data blocks, copying	20-12

data capacity per screen	5-163
data sampling	24-1
date/time display	14-101
debug function	21-65
debugging projects	34-3
default screen display on GP power up, choosing	12-7
delay feature	11-71
delete file	21-57
Device Access API	37-88, 37-169
device monitor	A-41
device/PLC	5-140
device/PLC series settings	5-78
device/PLC system data area allocation	A-22
device/PLC, changing	7-17, 7-28
direct access and memory link, using together	A-37
direct access method	7-7, 7-9, 12-24, A-4
direct access method plus memory link method	7-8, 7-10
display alarm message (banner) position	19-8
display historical data	17-51
display position point	10-10
display scan time	A-21, A-36
display settings	5-76
display system settings	5-109
display unit settings	5-110
displayed text, changing	15-8
double touch	11-24
download from external storage	33-36
DRAM	24-101
draw	9-1
drawing	
arcs/pies	9-14
by pixels	9-6
circles/ovals	9-11
line/polyline	9-7
polygons	9-16
rectangles	9-8
scales	9-18
tables	9-20
drawing using other languages	A-68
D-Scripts	20-2

E

Enable System Data Area	12-11, 12-16, 18-20
enable system data area	26-9, 26-12
error check	5-94
event recorder	27-22, 27-84
example system environment	1-4
external operation from multiple GPs	19-146

F

File Manager	
moving	25-39
overview	25-86
file name, changing	21-49
filing data	25-46, 25-52
capacity	25-110
flow	25-5
transfer	25-108

fixed pin	9-49
fixed pins, display	9-80
fixing/unfixing object position	9-49
font settings	6-19
font types	6-2, 6-4
fonts, adding/deleting	6-5
forced screen switching	A-14, A-28
free space on storage device	12-24
function name	20-65

G

global D-Scripts	20-2
Global Window	18-4, 18-14
GP to PC	
receiving project files	33-9, 33-18
GP-Pro EX	1-2
GP-PRO/PBIII for Windows	2-2
graph	
data block display	17-55
historical trend	17-40
meter	17-36
normal	17-25
part settings	17-24
statistical	17-34
grids, setting up	9-57
group function	11-72
Group Number function	14-114
Guide Display	9-79

H

Handling API	37-77, 37-169
header/footer	5-55
hierarchical screen change	12-20
historic data	17-15
HMI system variables (#H system variables)	A-102

I

image fonts	6-15
image registration	10-23
index file	25-101
initialize memory	21-21, 21-22
input	
permitting	14-57, 14-61, 14-89, 14-93
sequential	14-33
input code table	9-76
input equipment settings	8-21
Input Order function	14-113
instructions, inserting	29-47
integer logic system variables	A-89
interlock	11-15
interlock touch action control	14-25
internal device address	A-5, A-7
internal device to data buffer	21-85
IPC Settings	37-154

J

Japanese FEP	16-42
JPEG file of screen capture	12-17

K

keep transfer	29-75
keypad	
creating	16-10
packages of	16-36
popup	16-3, 16-39
registration	16-23
setup	16-3, 16-7
system	16-21
user	16-22
keys	16-27

L

ladder monitor	A-42
lamp settings	13-30
language	
change settings	15-53
changing	15-16, 15-23
line chart	17-11, 17-15, 24-14
line types, setting	9-37
Local Window	18-4, 18-7
logic editor	29-98
logic memory, confirming	29-111
logic monitor, starting and stopping	29-83
logic operation examples	21-96
logic program, correcting errors	29-82
logic system variables (#L system variables)	A-85
loop feature	12-24
loop function	25-107
LS area	A-9

M

main window	5-73
mark registration	9-81, 9-83
mark restrictions	9-85
Marks, display image created with	9-66
memory	
operation	21-7
ring	21-15
memory link method	12-24, A-6
Memory Loader	33-63
memory loader	33-36
Message Display	19-135
message display	15-37
messages (text), changing and displaying	15-4
monochrome	
16 levels	9-34
LCD	9-34
move range and move direction	10-22
movie	
converting files	27-41
saving to CF card	27-13
saving to FTP server	27-16
selecting at run time	27-33
using file manager to play	27-38
moving picture	10-17
moving the file manager	27-40
multi-function	11-32

multifunction feature 11-72
multilanguage 15-16, 15-23

N

number of features per screen 5-163
numbering, automatic 25-106
numeric display 14-44

O

objects
aligning 9-32
duplicating 9-28
editing 9-26
enlarging/reducing 9-27
grouping 9-31
moving 9-28
reversing 9-33
rotating 9-32
ungrouping 9-31
offset address calculation examples 21-99
online edit 29-91
online monitor 29-77
online update 2-21
operand settings 29-58
operating environment 3-3, 3-4
operation example 21-96
operation results 20-66
operator 21-77
option settings 5-145
output file list 21-56
overlapping pictures 10-8, 10-13

P

package contents 3-2
package registration 9-85
parameter for read/write 37-91
part ID, display 9-80
Part Palette 9-41
Parts Toolbox 5-74
parts, editing 9-38
password 33-31
password input window 22-7
passwords 5-23, 5-84, 5-86, 22-1
 editing 5-24
 remove/change 33-34
patterns, setting 9-37
PC project simulation 32-1
PC to GP
 sending project files 33-6, 33-13
 using modem to transfer screen data 33-49
pen recorder 17-42
Peripheral List 5-137
Picture Display 19-134
picture display 10-25
pictures 9-6
placing pictures registered in package 9-53
play list
 creating file 27-26

 using 27-26
position point, display 10-16, 10-51
print
 batch 19-66
 cancel 34-23
 current screen 34-13
 feature 34-10
 format 19-67
 introduction 34-3
 layout 34-7
 project settings 34-33
 real-time 19-66
 rich text file, format 34-3

printer

 configuring 34-11
 connecting 34-8, 34-10
 types of 34-9
printer operation 21-59
processing 14-81
programming D-Scripts 20-2
project converter 2-11
project files
 backup 5-19
 create 5-7
 setup 5-7
project information 5-39
project simulation on PC 32-1
properties 5-79, 5-103
Pro-Server EX 37-11

R

read area, internal device 17-59
read file 21-54
real-time images, displaying 27-8
receiving data 33-67
recipes
 CSV data 25-9, 25-17, 25-25
 CSV format 25-9
 data 25-30
 data, transfer 25-63
 filing data 25-42
 overview 25-2
 save to CF card 25-10
 settings 25-56
 transfer 25-67
 transfer CSV data 25-3
 transfer filing data 25-3
Reflect in Device/PLC 12-15
registering
 new part images 9-45
 pictures in package 9-55
 screen as template 9-62
registering addresses 29-13
Remote PC Access (RPA)
 input 36-20
 window display 36-16
replace 5-69
resolution, convert 5-92, 5-110

RPA (Remote PC Access)

key code	36-4
overview	36-2
VNC server, installing	36-2
rungs and branching, inserting	29-39

S

sampled data	25-30
sampling	
CSV format	24-20
data	24-14
data display	24-93, 24-116
data storage methods	24-112
data, timing	24-104
display format of data	24-30
group list	24-37
if data cannot be sampled	24-120
overview	24-2
saving data to CF Card	24-20
structure	24-99
usage capacity of data	24-101
sampling settings	17-11
saving	
alarm history	19-54
CSV format	19-54
to CF Card/USB storage	19-57
saving to CF Card	12-17
screen capture	5-169, 12-17, 12-24
screen colors, changing	5-61
screen data list window	5-104
screen display, turning off	35-8, 35-10
screen information	5-159
screen list	5-101
screen saver	35-1, 35-8
screens	
copying	5-64
saving displayed	12-17
screens, changing	12-4, 12-9, 12-12, 12-20
script	
commands	21-1
programming	21-1
script I/O settings	5-143
scripts	
creating	20-23
creating global	20-41
error code list	20-67
extended	20-2
extended, structure of	20-22
function summary	20-27
Global D-Script	20-53
main function	20-27
operation	20-5
printing from	20-21
programming	20-59
scrolling alarm messages	19-6
search	5-69
search and replace	5-69
search memory	21-18

security

level list	22-11
passwords	22-1
settings	22-9
select screen from templates	9-60
sending data	33-66
shift memory	21-23
show address	9-80
Show Grid	9-80
show history	19-90
show limit value	14-108
Show Ruler	9-80
show scale	17-62
show text window	19-42
simulation on PC	32-1
SIO port operation	21-25
SIO port operations	20-62
Snap to Grid	9-79
sound	26-1, 26-13
sound options	11-46
speaker	26-3
Special Data Display	25-71
special relay	A-19, A-34
SRAM auto backup	5-169
SRAM backup	24-100
SRAM backup, about	25-109
standard font	6-3
state list	11-49
statistical data display	14-104
STN color LCD	9-34
stop communications	7-12
stroke font	6-3
sub display	
help	19-34
using global window	19-136
using local window	19-136
supported functions, list by device	1-5
supported models	3-7
switch	
bit	11-41
Change Screen	11-58
color-changing	11-27
label	11-51
radio	11-34
Selector	11-69
Special	11-59
Word	11-54
Switch Lamp	11-38
switches	11-1
symbol variable	5-156
symbol variables, importing/exporting	29-26
system	
area	A-25
data area	A-11, A-26
variables	A-84
system data area	7-9
system settings	5-95
system settings window	5-109

T

template registration	5-161
text	
display area	15-63, 15-64, 15-65
operation	21-80
operation error status	21-89
registration	15-49
table settings	15-51
text alarm	19-126
Text Data Mode	5-141
text display	14-84
text settings	9-77
text table	15-16, 15-23, 15-31, 15-36
TFT color LCD	9-34
time schedule	23-1, 23-11
time, adjusting	35-1, 35-4
time-base	14-72
toolbar, customizing	29-6
touch areas, display	9-80
transfer project files	33-6
transfer settings	33-59
Transfer Tool	33-57
installation requirements	3-6
installing	33-68
transfer via Ethernet (LAN)	33-12
transfer via USB cable	33-5
trigger action	A-53
trigger condition	20-46
two-dimensional code reader	8-4, 8-12

U

Ultra VNC Server, RPA	36-7
upload to external storage	33-36, 33-43
usable address	A-4, A-7
USB memory to CF Card	A-77
USB storage handling instructions	24-137
user-defined functions	
creating	20-58
setup of	20-44
utility settings	5-88

V

VB.NET 2003 Program	37-56
Video	27-1
video	
before and after malfunction	27-20
recording	27-1
Video Control Area, example use of	27-132
View Addresses in the Address Map	5-30
VNC server, RPA	36-7

W

window frame	37-161
Window Part	18-21
Window Screen	19-136
windows	
changing displayed	18-11, 18-17
creating	18-4

displaying	18-7
displaying multiple on single screen	18-30
Windows XP Embedded	37-11
WinGP	37-2
API	37-33
executing the application	37-71
handling API	37-55
license key code	37-2
Prohibit Double Calling API	37-119
read or write data	37-37
Reading Text in VB	37-120
SDK	37-13
starting	37-25
VB.Net 2003 Program Examples	37-38
VB6 Program Example	37-65
WinGP, exiting	21-69
work flow to start of operation	4-2, 4-3
work space	5-95
write to file	21-44
writing text	9-23

X

XOR display	10-28, 10-47
-------------------	--------------

Z

Zoom Box	5-75
----------------	------