

# Index

- A**
- Abnormal termination .....1-9
  - Address Block Conversion .....1-94
  - Address Block Conversion on Model Change .....1-94
  - AddressMonitor ..... 2-53, 2-159
  - Administrator .....1-3
  - Alarm ..... 1-95, 1-109, 1-111
  - Analog ..... 1-76, 2-48
  - Analog settings .....2-152
  - API communication .....1-151
- B**
- Backlight ..... 2-25, 2-31, 2-83
  - Backup ..... 1-16, 2-24
  - Backup data ..... 1-27, 2-103, 2-157
  - Backup SRAM ..... 1-107, 1-141, 2-43, 2-96, 2-104
  - Bar Code Settings ..... 2-37, 2-91
  - Brightness Control ..... 2-23, 2-160
  - Built-in Function .....1-95
  - Buzzer ..... 1-54, 2-28, 2-83
- C**
- Calibration ..... 2-48, 2-99
  - Calibration Touch Panel ..... 2-48, 2-99
  - CF card .....1-27
  - CF memory loader ..... 1-127, 2-156
  - CF memory loader tool .....1-27
  - CF Starting .....2-156
  - Check Board .....2-150
  - Check Color Tone .....2-102
  - Check COM1/COM2/LAN ..... 2-49, 2-100
  - Check Display Pattern ..... 1-56, 2-97
  - Check Font .....2-98
  - Check Touch Panel ..... 2-48, 2-99
  - Checking Communication ..... 2-57, 2-115
  - Clock ..... 1-141, 2-24
  - Color .....2-158
  - Comment .....1-121, 2-81, 2-107, 2-114
  - Communication line .....1-68, 1-69, 1-70, 1-71
  - Communication settings ..... 2-34, 2-89
  - Communication speed ..... 1-67, 2-91, 2-93
  - Contrast  
..... 2-23, 2-83, 2-126, 2-127, 2-128, 2-130, 2-132, 2-160
  - Controller function execution time .....2-62
  - Cross cable ..... 1-21, 1-44
  - Cross cursor .....2-32
  - Cross-hair cursor .....2-155
- D**
- Data .....1-10, 1-16, 1-27, 1-29, 1-30, 1-53, 1-54
  - Data Display .....1-64, 1-66, 1-67, 1-68, 1-70, 1-72, 2-91
  - Debug Settings .....2-143
  - Default .....2-158
  - Detach hardware .....2-139
  - Device address 1-64, 1-65, 1-66, 2-85, 2-86, 2-108, 2-115
  - Device Monitor .....2-159
  - Device read command ..... 1-131, 1-133, 1-135
  - Device write command ..... 1-131, 1-132, 1-133
  - Device/PLC Settings .....2-89
  - DeviceNet (Slave) unit .....1-80, 1-163
  - DIO settings .....2-151
  - Display scan time ..... 1-72
  - Display Settings .....2-83
  - Dot .....2-99
  - Download .....1-6, 2-156
  - Driver ..... 1-15, 1-69, 1-71
  - D-script ..1-64, 1-66, 1-67, 1-71, 1-72, 1-95, 1-107, 2-83
  - Duplicate .....1-102
- E**
- Error .....1-87
  - Ethernet ..... 1-18, 1-62, 2-35
  - Ethernet settings .....2-38, 2-88
  - EX module ..... 1-82, 1-163, 2-60
  - EXM Driver .....1-157, 2-150
  - Export ..... 1-94, 1-100, 1-102
  - Extended Script .....1-108, 1-144
- F**
- Firewall .....1-23
  - FLEX NETWORK .....2-56
  - FLEX NETWORK unit ..... 1-76, 1-162, 2-112
  - Forced transfer .....2-72
  - Frame Settings .....2-142
- G**
- General .....2-125
- H**
- Hatch .....1-27, 1-140
  - Home ..... 2-80, 2-105, 2-113
- I**
- I/O .....1-29, 1-120
  - I/O Check ..... 1-75, 2-55, 2-109
  - I/O Driver Settings .....2-109, 2-110
  - I/O Monitor ..... 1-73, 2-54, 2-56, 2-110, 2-116, 2-149
  - Images .....1-101
  - Import ..... 1-94, 1-98, 1-100, 1-101
  - Initial screen .....1-51, 2-26, 2-27, 2-82
  - Initial Start Mode screen ..... 1-29
  - Initialization .....2-43
  - Initialization Menu Settings .....2-95
  - Initialization of the backup SRAM .....2-46, 2-96
  - Initialization of the CF card .....2-45, 2-96
  - Initialization of the user memory .....2-44, 2-95
  - Install ..... 1-3
  - Instruction operand ..... 1-112
  - IP address .....2-38
  - IPC .....2-73, 2-135

|                                                           |                                       |
|-----------------------------------------------------------|---------------------------------------|
| <b>K</b>                                                  |                                       |
| Keypad .....                                              | 1-109, 1-111                          |
| <b>L</b>                                                  |                                       |
| Ladder Monitor .....                                      | 2-159                                 |
| Ladder program .....                                      | 1-54, 1-72                            |
| Liquid crystal display .....                              | 2-97                                  |
| Lithium battery .....                                     | 1-141                                 |
| Log in .....                                              | 1-3                                   |
| Logic program                                             |                                       |
| 1-112, 1-128, 2-52, 2-53, 2-63, 2-64, 2-108, 2-114, 2-147 |                                       |
| LogicMonitor .....                                        | 2-52, 2-159                           |
| Loopback cable .....                                      | 1-74, 1-75, 2-49, 2-54, 2-55          |
| LS Area .....                                             | 1-69, 1-71                            |
| <b>M</b>                                                  |                                       |
| Main Unit .....                                           | 2-147                                 |
| Main Unit Settings                                        |                                       |
| .....2-82, 2-108, 2-114, 2-125, 2-131, 2-136, 2-155       |                                       |
| Maintenance Menu .....                                    | 2-97                                  |
| Mark .....                                                | 1-101                                 |
| Memory .....                                              | 1-3, 1-11, 1-16, 2-43                 |
| Memory check .....                                        | 1-121                                 |
| Memory Information .....                                  | 2-47, 2-101                           |
| Memory loader tool .....                                  | 1-27                                  |
| Memory-resident software .....                            | 1-12, 1-24, 1-25                      |
| Menu and Error Settings ....                              | 1-48, 1-50, 1-52, 2-16, 2-84          |
| Modem .....                                               | 1-29, 1-126                           |
| Movie Converter .....                                     | 1-91                                  |
| Multilingual Manager .....                                | 1-6                                   |
| <b>N</b>                                                  |                                       |
| Network Settings .....                                    | 2-141                                 |
| New Project File .....                                    | 1-93                                  |
| Noise .....                                               | 1-60, 1-65, 1-68, 2-126, 2-128, 2-133 |
| NTFS format .....                                         | 1-27                                  |
| Numeric touch keys .....                                  | 2-18                                  |
| <b>O</b>                                                  |                                       |
| Offline mode menu .....                                   | 2-29                                  |
| Online monitoring .....                                   | 1-128                                 |
| Online update .....                                       | 1-32                                  |
| Operating environment .....                               | 1-3, 1-11                             |
| Operation Settings .....                                  | 2-83                                  |
| <b>P</b>                                                  |                                       |
| Package Window .....                                      | 1-101                                 |
| Part List .....                                           | 1-102                                 |
| Pass-through .....                                        | 1-35, 1-39                            |
| Password .....                                            | 1-16, 1-26, 1-28                      |
| Password settings .....                                   | 2-16, 2-40, 2-94                      |
| Peripheral Settings .....                                 | 2-33, 2-89, 2-109, 2-115              |
| Pin .....                                                 | 1-131, 1-145, 2-34                    |
| Play .....                                                | 2-130                                 |
| PLC .....                                                 | 1-130, 2-89                           |
| Position .....                                            | 2-158                                 |
| Power supply .....                                        | 1-51, 1-145, 1-160, 2-147             |
| Print .....                                               | 1-103, 2-36, 2-90                     |
| Printer Settings .....                                    | 2-36, 2-90                            |
| PROFIBUS .....                                            | 1-77, 1-162                           |
| PROFIBUS Slave Unit .....                                 | 1-77                                  |
| Project file .....                                        | 1-10, 1-13, 2-69, 2-103               |
| Project Information .....                                 | 1-107                                 |
| ProjectCopy .....                                         | 1-128                                 |
| Pro-Server EX .....                                       | 1-136, 2-39                           |
| <b>R</b>                                                  |                                       |
| RAAA*** .....                                             | 1-139                                 |
| RAAE*** .....                                             | 1-147                                 |
| REAA*** .....                                             | 1-148                                 |
| Received data .....                                       | 1-130                                 |
| Recording .....                                           | 2-128                                 |
| Reset .....                                               | 2-156                                 |
| Restart IPC .....                                         | 2-138                                 |
| RGB .....                                                 | 2-102                                 |
| RGB Screen .....                                          | 2-158                                 |
| RGE**** .....                                             | 1-152                                 |
| RPA Function .....                                        | 1-104                                 |
| RS-232C .....                                             | 1-61, 2-100                           |
| RS-422 .....                                              | 1-61, 2-100                           |
| <b>S</b>                                                  |                                       |
| Sampling Settings .....                                   | 1-107                                 |
| Screen .....                                              | 2-158                                 |
| Screen Management .....                                   | 1-93                                  |
| Screen Settings .....                                     | 2-20, 2-82                            |
| Script error .....                                        | 1-32                                  |
| Script Settings .....                                     | 2-93                                  |
| Search Window .....                                       | 1-94                                  |
| Security Password .....                                   | 2-42, 2-94                            |
| Security settings .....                                   | 1-32, 1-33, 1-99                      |
| Self-diagnosis .....                                      | 1-25, 2-15                            |
| Setup .....                                               | 1-55, 2-39                            |
| Show Terminals .....                                      | 2-148                                 |
| Simulation .....                                          | 1-122                                 |
| Sink type .....                                           | 1-74, 2-54, 2-109                     |
| SIO .....                                                 | 1-143, 1-144, 2-100                   |
| Sound Settings .....                                      | 1-99                                  |
| Source type .....                                         | 1-74, 2-55, 2-109                     |
| Specify file name and run .....                           | 2-140                                 |
| Standby mode .....                                        | 2-25, 2-82                            |
| Start .....                                               | 1-6, 1-9, 1-93                        |
| Start Explorer .....                                      | 2-139                                 |
| Start Task Manager .....                                  | 2-140                                 |
| Status LED .....                                          | 1-47, 1-51, 2-31                      |
| STD Driver .....                                          | 1-154, 2-148                          |
| Straight cable .....                                      | 1-21, 1-44                            |
| Switch .....                                              | 1-47, 1-49, 2-16                      |
| Symbol Variable List .....                                | 1-101                                 |
| System area .....                                         | 1-53, 1-54, 1-138                     |
| System Area Settings .....                                | 2-87                                  |
| System error .....                                        | 1-149, 2-84                           |
| System Menu .....                                         | 2-84, 2-156                           |
| System Password .....                                     | 2-94                                  |
| <b>T</b>                                                  |                                       |
| Template .....                                            | 1-102                                 |
| Text Table .....                                          | 1-100, 1-111                          |

|                                |                   |
|--------------------------------|-------------------|
| Touch operation .....          | 2-31, 2-83        |
| Touch sound .....              | 2-28              |
| Transfer .....                 | 1-13, 1-123, 2-15 |
| Transfer from CF to SRAM ..... | 2-103             |
| Transfer from SRAM to CF ..... | 2-71, 2-104       |
| Transfer Project File .....    | 2-103             |

## U

|                                             |                              |
|---------------------------------------------|------------------------------|
| Unit .....                                  | 1-76, 2-131                  |
| Upload .....                                | 1-27, 1-28, 2-156            |
| USB .....                                   | 2-92, 2-101                  |
| USB storage .....                           | 2-156                        |
| USB transfer cable .....                    | 1-13, 1-84                   |
| USB-Serial (RS-232C) conversion cable ..... | 1-85                         |
| User memory (FEPR0M) ..                     | 1-48, 1-50, 1-52, 2-19, 2-43 |
| User-defined function .....                 | 1-95                         |

## V

|                               |                            |
|-------------------------------|----------------------------|
| Variable .....                | 1-101, 2-52, 2-53, 2-159   |
| VD Display Settings .....     | 2-67, 2-68, 2-132          |
| VD Operation Settings .....   | 2-131                      |
| Video display .....           | 2-65                       |
| Video Settings .....          | 2-125, 2-126, 2-128, 2-130 |
| Video window .....            | 2-132, 2-133               |
| Virtual COM port Driver ..... | 1-37                       |
| VM unit .....                 | 1-79, 2-65                 |
| VM Unit Settings .....        | 2-131                      |
| Volume .....                  | 2-158                      |

## W

|                       |                                 |
|-----------------------|---------------------------------|
| Watchdog error .....  | 1-153                           |
| Window Settings ..... | 2-84                            |
| WinGP .....           | 1-91, 1-92, 1-103, 1-151, 2-135 |
| WinGP SDK .....       | 1-92                            |

