

Fanuc Connectable Devices

The following tables list the devices that can be connected and used with the GP.

■ PLCs

◆ 1:1 Connection

Series Name	CPU	Link Unit	Comments	Device type in Screen Editor	GP Series GLC 2000 Series	GLC 100 Series GLC 300 Series
FANUC Power Mate (Motion controller)	Power Mate	CPU Direct Connection	Designate the GPs host as a Fanuc PLC. The GP series cannot connect to the CRT/MDI. The handy-type programmer DPL/MDI can be used jointly with the GP series connection type.	FANUC Power Mate series	○	x
FANUC Series	16-MC	Link I/F on CPU unit	Designate the GPs host as a Fanuc PLC. Only RS232C Serial Port 2 (JP5B) can be used at this time.			