YASKAWA Electric Corporation

MP Series SIO (Extension) Driver

1	System Configuration	3
2	Selection of External Device	6
3	Example of Communication Setting	7
4	Setup Items	9
5	Cable Diagram	14
6	Supported Device	16
7	Device Code and Address Code	17
8	Error Messages	

Introduction

This manual describes how to connect the Display and the External Device (target PLC).

In this manual, the connection procedure will be described by following the below sections:

1	System Configuration This section shows the types of External Devices which can be connected and SIO type.	"1 System Configuration" (page 3)
2	Selection of External Device Select a model (series) of the External Device to be connected and connection method.	"2 Selection of External Device" (page 6)
3	Example of Communication Settings This section shows setting examples for communicating between the Display and the External Device.	"3 Example of Communication Setting" (page 7)
4	Setup Items This section describes communication setup items on the Display. Set communication settings of the Display with GP-Pro Ex or in off-line mode.	^{ভেল} "4 Setup Items" (page 9)
5	Cable Diagram This section shows cables and adapters for connecting the Display and the External Device.	"5 Cable Diagram" (page 14)
	Operation	

1 System Configuration

The system configuration in the case when the External Device of YASKAWA Electric Corporation and the Display are connected is shown.

Series	CPU	Link I/F	SIO Type	Setting Example	Cable Diagram
		Serial port on 218IF-01	RS232C	"3.1 Setting Example 1" (page 7)	" Cable Diagram 1" (page 14)
	MP2300	Serial port on 218IF-02	RS232C	"3.1 Setting Example 1" (page 7)	" Cable Diagram 1" (page 14)
MP2000	MP2200 MP2310	Serial port on 260IF-01	RS232C	"3.1 Setting Example 1" (page 7)	" Cable Diagram 1" (page 14)
	MP23008	Serial port on 261IF-01	RS232C	"3.1 Setting Example 1" (page 7)	" Cable Diagram 1" (page 14)
		PORT on 217IF-01	R\$232C	"3.1 Setting Example 1" (page 7)	" Cable Diagram 1" (page 14)

Connection Configuration

• 1:1 Connection



■ IPC COM Port

When connecting IPC with an External Device, the COM port used depends on the series and SIO type. Please refer to the IPC manual for details.

Usable port

Series	Usable Port			
Ochos	RS-232C	RS-422/485(4 wire)	RS-422/485(2 wire)	
PS-2000B	COM1 ^{*1} , COM2, COM3 ^{*1} , COM4	-	-	
PS-3450A, PS-3451A, PS3000-BA, PS3001-BD	COM1, COM2 ^{*1*2}	COM2 ^{*1*2}	COM2 ^{*1*2}	
PS-3650A, PS-3651A	COM1 ^{*1}	-	-	
PS-3700A (Pentium®4-M) PS-3710A	COM1 ^{*1} , COM2 ^{*1} , COM3 ^{*2} , COM4	COM3 ^{*2}	COM3 ^{*2}	
PS-3711A	COM1 ^{*1} , COM2 ^{*2}	COM2 ^{*2}	COM2 ^{*2}	
PL-3000B, PL-3600T, PL-3600K, PL-3700T, PL-3700K, PL-3900T	COM1 ^{*1*2} , COM2 ^{*1} , COM3, COM4	COM1 ^{*1*2}	COM1 ^{*1*2}	

*1 The RI/5V can be switched. Use the IPC's switch to change if necessary.

*2 Set up the SIO type with the DIP switch. Please set up as follows according to SIO type to be used.

DIP switch setting: RS-232C

DIP switch	Setting	Description	
1	OFF ^{*1}	Reserved (always OFF)	
2	OFF	SIO type: RS-232C	
3	OFF	510 type. K5-252C	
4	OFF	Output mode of SD (TXD) data: Always output	
5	OFF	Terminal resistance (220 Ω) insertion to SD (TXD): None	
6	OFF	Terminal resistance (220 Ω) insertion to RD (RXD): None	
7	OFF	Short-circuit of SDA (TXA) and RDA (RXA): Not available	
8	OFF	Short-circuit of SDB (TXB) and RDB (RXB): Not available	
9	OFF	- RS (RTS) Auto control mode: Disabled	
10	OFF		

*1 When using PS-3450A, PS-3451A, PS3000-BA and PS3001-BD, turn ON the set value.

DIP switch setting: RS-422/485 (4 wire)

DIP switch	Setting	Description	
1	OFF	Reserved (always OFF)	
2	ON	SIO type: PS 422/485	
3	ON	510 type. NS-422/405	
4	OFF	Output mode of SD (TXD) data: Always output	
5	OFF	Terminal resistance (220 Ω) insertion to SD (TXD): None	
6	OFF	Terminal resistance (220 Ω) insertion to RD (RXD): None	
7	OFF	Short-circuit of SDA (TXA) and RDA (RXA): Not available	
8	OFF	Short-circuit of SDB (TXB) and RDB (RXB): Not available	
9	OFF	RS (RTS) Auto control mode: Disabled	
10	OFF	KS (K15) Auto control mode. Disabled	

DIP switch setting: RS-422/485 (2 wire)

DIP switch	Setting	Description	
1	OFF	Reserved (always OFF)	
2	ON	SIO type: PS 422/485	
3	ON	510 type. K5-422/405	
4	OFF	Output mode of SD (TXD) data: Always output	
5	OFF	Terminal resistance (220 Ω) insertion to SD (TXD): None	
6	OFF	Terminal resistance (220 Ω) insertion to RD (RXD): None	
7	ON	Short-circuit of SDA (TXA) and RDA (RXA): Available	
8	ON	Short-circuit of SDB (TXB) and RDB (RXB): Available	
9	ON	- RS (RTS) Auto control mode: Enabled	
10	ON		

2 Selection of External Device

Select the External Device to be connected to the Display.

💰 New Project File		×
62-2co	Device/PLC	
	Maker YASKAWA Electric Corpor	ration
	Series MP Series SIO(Extension)	•
	🗖 Use System Area	Refer to the manual of this Device/PLC
	Connection Method	
	Port COM1 💌	
		Go to Device/PLC Manual
Back	(B) Communication Settings	New Logic New Screen Cancel

Setup Items	Setup Description
Maker	Select the maker of the External Device to be connected. Select "YASKAWA Electric Corporation".
Driver	Select a model (series) of the External Device to be connected and connection method. Select "MP Series SIO (Extension)". Check the External Device which can be connected in "MP Series SIO (Extension)" in system configuration. I System Configuration" (page 3)
Use System Area	Check this option when you synchronize the system data area of Display and the device (memory) of External Device. When synchronized, you can use the ladder program of External Device to switch the display or display the window on the display. Cf. GP-Pro EX Reference Manual "LS Area (Direct Access Method Area)" This can also be set in GP-Pro EX or in the Display's off-line mode. Cf. GP-Pro EX Reference Manual "Display Unit (System Area) Settings Guide" Cf. Maintenance/Troubleshooting Manual "Main Unit - System Area Settings"
Port	Select the Display port to be connected to the External Device.

3 Example of Communication Setting

Examples of communication settings of the Display and the External Device, recommended by Pro-face, are shown.

3.1 Setting Example 1

Settings of GP-Pro EX

Communication Settings

To display the setting screen, select [Device/PLC Settings] from [System setting window] in workspace.

Device/PLC 1					
Summary				Ch	ange Device/PLC
Maker YASKAWA Electri	c Corporation	Driver MP Se	ries SIO(Extension)	Port	COM1
Text Data Mode 1	<u>Change</u>				
Communication Settings					
SIO Type 📀	RS232C C RS	422/485(2wire)	C R\$422/485(4wire)		
Speed 19	200 💌				
Data Length O	7 📀 8				
Parity O	NONE · EV	'EN	O ODD		
Stop Bit 📀	1 0 2				
Flow Control	NONE · ER	(DTR/CTS)	○ XON/XOFF		
Timeout 3	(sec)				
Retry 2	÷				
Wait To Send 0	• (ms)				
RI / VCC	RI O VC	c			
In the case of RS232C, j or VCC (5V Power Suppl Isolation Unit, please sele	you can select the 9th ly). If you use the Dig act it to VCC.	n pin to RI (Input) jital's RS232C	Default		
Device-Specific Settings					
Allowable No. of Device/PLCs 1 Unit(s)					
No. Device Name		Station No.=	1		
	-	<u></u> ,			

Device Setting

To display the setting screen, click I ([Setting]) of External Device you want to set from [Device-Specific Settings] of [Device/PLC Settings].

When you connect multiple External Device, click if from [Device-Specific Settings] of [Device/PLC Settings] to add another External Device.

💣 Individual Devi	ice Setti 🗙
PLC1	
Station No. 1	•
	Default
OK (<u>D</u>)	Cancel

Settings of External Device

Communication setting of communication module by ladder software (MPE720). Please refer to the manual of external device for more detail.

- Ladder Software Setting
- 1 Start ladder software, make an order folder and a PLC folder in a root folder.
- 2 Click the right button of the PLC which select logon in the displayed menu.

NOTE

• Logon after confirming that a check does not begin [online] of a displayed menu.

- Refer to User's Manual of the PLC about a method of logon.
- **3** Double-click the [Definition folder]-[Module constitution] of the PLC folder, and display [Engineering Manager].
- 4 Select the rack classification and communication module, the pull-down menu in [Controller] of [Engineerring Manager].

Set the number corresponding to the slot number that a communication module uses.

Select the communication module, setting contents are displayed to [Module details] of [Enginnering Manager].

5 Double-click the number part at No. in [Module details].

Double-click the slot number connecting the ethernet unit.

Setup Items	Setup Description
Transmission Protocol	MEMOBUS
Master/Slave	Slave
Device Address	Device address of the External Device
Serial I/F	RS-232C
Transmission Mode	RTU
Data Length	8Bit
Parity Bit	even
Stop Bit	1Stop
Baud Rate	19.2K
Sending	Disable
Automatically Reception	Disable

6 Double-click the "No.1", and set serial communication.

Use serial communication setting to forward communication setting and the ladder program to the PLC.

- 7 Save setting content and finish [Engineering Manager].
- ${f 8}$ DIP switch "INIT" of a communication module is ON and spend a power supply.
- **9** Forward communication setting to a communication module.
- 10 Logon the PLC at online and write in the data which transferred at flash memory.
- **11** Power supply of PLC is OFF and DIP switch of the INIT is OFF, after spend the power supply of PLC.

4 Setup Items

Set communication settings of the Display with GP-Pro EX or in off-line mode of the Display. The setting of each parameter must be identical to that of External Device.

"3 Example of Communication Setting" (page 7)

4.1 Setup Items in GP-Pro EX

Communication Settings

To display the setting screen, select [Device/PLC Settings] from [System setting window] in workspace.

Devid	e/PLC1		
Sum	imary		Change Device/PLC
	Maker YASKAWA B	Electric Corporation	Driver MP Series SIO(Extension) Port COM1
	Text Data Mode	1 <u>Change</u>	
Corr	munication Settings		
	SIO Type	R\$232C	C RS422/485(2wire) C RS422/485(4wire)
	Speed	19200	▼
	Data Length	O 7	• 8
	Parity	C NONE	• EVEN O ODD
	Stop Bit	• 1	0 2
	Flow Control	C NONE	ER(DTR/CTS) C XON/XOFF
	Timeout	3 📫 (s	sec)
	Retry	2 🔹	
	Wait To Send	ı) <mark>÷</mark> 0	ms)
	RI / VCC	BI B	O VCC
	In the case of RS23 or VCC (5V Power Isolation Unit, pleas	32C, you can selec Supply). If you use e select it to VCC.	st the 9th pin to RI (Input) e the Digital's RS232C Default
Dev	ice-Specific Settings		
	Allowable No. of Devi	ice/PLCs_1_Unit(s)	
	No. Device Nar	me	Settings Setting No.=1

Setup Items	Setup Description		
SIO Type	Display the SIO type to communicate with the External Device.		
Speed	Select speed between External Device and Display.		
Data Length	Select data length.		
Parity	Select how to check parity.		
Stop Bit	Select stop bit length.		
Flow Control	Select the communication control method to prevent overflow of transmission and reception data.		
Timeout	Use an integer from 1 to 127 to enter the time (s) for which Display waits for the response from External Device.		
Retry	In case of no response from the External Device, use an integer from 0 to 255 to enter many times the Display retransmits the command.		
Wait To Send	Use an integer from 0 to 255 to enter standby time (ms) for the Display from receiving packets to transmitting next commands.		
RI/VCCYou can switch RI/VCC of the 9th pin when you select RS232C for SIO type. It is necessary to change RI/5V by changeover switch of IPC when connect wit Please refer to the manual of the IPC for more detail.			

9

♦ Device Setting



Setup Items	Setup Description
Station No.	Enter a station number of the External Device, using 1 to 63.

4.2 Setup Items in Off-Line Mode

NOTE

• Refer to the Maintenance/Troubleshooting manual for information on how to enter off-line mode or about the operation.

Cf. Maintenance/Troubleshooting Manual "Off-line Mode"

• The number of the setup items to be displayed for 1 page in the off-line mode depends on the Display in use. Please refer to the Reference manual for details.

Communication Settings

To display the setting screen, touch [Device/PLC Settings] from [Peripheral Settings] in off-line mode. Touch the External Device you want to set from the displayed list.

Comm.	Device	Option		-
MP Series SIO(E	xtension)		[COM1]	Page 1/1
	SIO Type Speed Data Length Parity Stop Bit Flow Control Timeout(s) Retry Wait To Send(ms)	RS232C 19200 7 NONE 1 JER(DTR/C		UDD
	Exit		Back	2038/08/01 14:40:07

Setup Items	Setup Description			
	Select the SIO type to communicate with the External Device.			
SIO Type	To make the communication settings correctly, confirm the serial interface specifications of Display unit for [SIO Type]. We cannot guarantee the operation if a communication type that the serial interface does not support is specified. For details concerning the serial interface specifications, refer to the manual for Display unit.			
Speed	Select speed between External Device and Display.			
Data Length	Select data length.			
Parity	Select how to check parity.			
Stop Bit	Select stop bit length.			
Flow Control	Select the communication control method to prevent overflow of transmission and reception data.			
Timeout (s)	Use an integer from 1 to 127 to enter the time (s) for which Display waits for the response from External Device.			

continued to next page

Setup Items	Setup Description		
Retry	In case of no response from the External Device, use an integer from 0 to 255 to enter how many times the Display retransmits the command.		
Wait To Send (ms)	Use an integer from 0 to 255 to enter standby time (ms) for the Display from receiving packets to transmitting next commands.		

Device Setting

To display the setting screen, touch [Device/PLC Settings] from [Peripheral Settings]. Touch the External Device you want to set from the displayed list, and touch [Device].

Comm.	Device	Option	-	
MP Series SIO(E	xtension)		[COM1]	Page 1/1
Devic	e/PLC Name PL	C1		
	Station No.		1 🔻 🔺]
	Exit		Back	2038/08/01 14:40:09

Setup Items	Setup Description
Device/PLC Name	Select the External Device for device setting. Device name is a title of External Device set with GP-Pro EX.(Initial value [PLC1])
Station No.	Enter a station number of the External Device, using 1 to 63.

Option

To display the setting screen, touch [Device/PLC Settings] from [Peripheral Settings]. Touch the External Device you want to set from the displayed list, and touch [Option].

Comm.	Device	Option		
· · · ·				
MP Series SIO(E	xtension)		[COM1]	Page 1/1
	RI / VCC In the case the 9th pir Power Suppl RS232C Isol it to VCC.	 RI of RS232C, you to RI(Input) or y) If you use th ation Unit, plea 	● VCC can select • VCC(5V e Digital's se select	
	Exit		Back	2038/08/01 14:40:11

Setup Items Setup Description	
RI/VCC	You can switch RI/VCC of the 9th pin when you select RS232C for SIO type. It is necessary to change RI/5V by changeover switch of IPC when connect with IPC. Please refer to the manual of the IPC for more detail.

NOTE

• GP-4100 series do not have the [Option] setting in the off-line mode.

5 Cable Diagram

The cable diagram shown below may be different from the cable diagram recommended by YASKAWA Electric Corporation. Please be assured there is no operational problem in applying the cable diagram shown in this manual.

- The FG pin of the External Device body must be D-class grounded. Please refer to the manual of the External Device for more details.
- SG and FG are connected inside the Display. When connecting SG to the External Device, design the system not to form short-circuit loop.
- Connect the isolation unit, when communication is not stabilized under the influence of a noise etc..

Cable Diagram 1

Display (Connection Port)	Cable		Remarks	
GP3000 (COM1) ST (COM1) IPC ^{*1} PC/AT	1A	User-created cable	The cable length must be 15m or less.	
GP-4105 (COM1)	1B	User-created cable		

*1 Only the COM port which can communicate by RS-232C can be used.

IPC COM Port (page 4) ∎



1B)



6 Supported Device

Range of supported device address is shown in the table below. Please note that the actually supported range of the devices varies depending on the External Device to be used. Please check the actual range in the manual of your connecting equipment.

This address can be specified as system data area.

Device Bit Address		Word Address	32 bits	Notes
System registers SB000000 - SB08191F		SW00000 - SW08191		
Input registers IB00000 - IBFFFFF		IW0000 - IWFFFF	-1 / H)	*1
Output registers	OB00000 - OBFFFFF	OW0000 - OWFFFF		*1
Data registers	MB000000 - MB65534F	MW00000 - MW65534		

*1 As for Input and Output registers, device 0x9000-0xFFFF cannot be written.

NOTE • P

Please refer to the GP-Pro EX Reference Manual for system data area.

Cf. GP-Pro EXReference Manual "LS Area (Direct Access Method)"Please refer to the precautions on manual notation for icons in the table.

"Manual Symbols and Terminology"

7 Device Code and Address Code

Use device code and address code when you select "Device Type & Address" for the address type in data displays.

Device	Device Name	Device Code (HEX)	Address Code
System registers	SW/SB	0080	Word address
Input registers	IW/IB	0001	Word address
Output registers	OW/OB	0081	Word address
Data registers	MW/MB	0000	Word address

8 Error Messages

Error messages are displayed on the screen of Display as follows: "No. : Device Name: Error Message (Error Occurrence Area)". Each description is shown below.

Item	Description		
No.	Error No.		
Device Name	Name of External Device where error occurs. Device name is a title of External Device set with GP-Pro EX.((Initial value [PLC1])		
Error Message	Displays messages related to the error which occurs.		
Error Occurrence Area	Displays IP address or device address of External Device where error occurs, or error codes received from External Device.		
	 NOTE IP address is displayed such as "IP address (Decimal): MAC address (Hex)". Device address is displayed such as "Address: Device address". Received error codes are displayed such as "Decimal [Hex]". 		

Display Examples of Error Messages

"RHAA035: PLC1: Error has been responded for device write command (Error Code: 2 [02H])"

NOTE
Refer to your External Device manual for details on received error codes.
Refer to "When an error is displayed (Error Code List)" in "Maintenance/Troubleshooting Manual" for details on the error messages common to the driver.

Error Code Peculiar to PLC

The error code peculiar to PLC is as follows.

Error code	Description		
0x90	Transfer error.		
0x92	Illegal parameter.		
0x96	Register No. over.		
0x9C	File is modified.		
0x9D	Data access error.		

Error Messages Specific to the External Device

Message ID	Error Message	Description
RHxx128	"(Node Name):PLC is busy now(Error Code: [Hex])"	PLC is "Busy"
RHxx129	"(Node Name):Option module is not mounted(Error Code: [Hex])"	Option module not mount.
RHxx130	"(Node Name):Module is not ready(Error Code: [Hex])"	Module is not ready
RHxx131	"(Node Name):CPU is stopped(Error Code: [Hex])"	CPU is stopped
RHxx132	"(Node Name): Write protected(Error Code: [Hex])"	Write protected