

SP5000 Series Open Box Wireless LAN Setting Manual

The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Neither Schneider Electric nor any of its affiliates or subsidiaries (hereinafter, referred to as Schneider Electric) shall be responsible or liable for misuse of the information that is contained herein. If you have any suggestions for improvements or amendments or have found errors in this publication, please notify us.

You agree not to reproduce, other than for your own personal, noncommercial use, all or part of this document on any medium whatsoever without permission of Schneider Electric, given in writing. You also agree not to establish any hypertext links to this document or its content. Schneider Electric does not grant any right or license for the personal and noncommercial use of the document or its content, except for a non-exclusive license to consult it on an "as is" basis, at your own risk. All other rights are reserved.

All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to help ensure compliance with documented system data, only the manufacturer should perform repairs to components.

When devices are used for applications with technical safety requirements, the relevant instructions must be followed.

Failure to use Schneider Electric software or approved software with our hardware products may result in injury, harm, or improper operating results.

Failure to observe this information can result in injury or equipment damage.

Copyright © 2017 Schneider Electric Japan Holdings Ltd. All Rights Reserved.

Table of Contents



	Safety Information	5
	About the Book	7
Chapter 1	Overview	9
	Introduction	10
	Workflow	12
	Network Authentication and Data Encryption	14
Chapter 2	Wireless LAN Settings	15
2.1	IP Address	16
	IP Address for Equipment	16
2.2	Starting WLAN Configuration Screen	18
	Startup Method	18
2.3	Setting Menu	20
	Introduction	21
	Select Language	22
	System Status	23
	Login	24
	TCP/IP Configuration	25
	Wireless LAN Configuration	27
	Smart Wireless Setup	29
	AP Search	32
	WLAN Up/Down (enable or disable wireless LAN)	33
	Password Configuration	34
	Restart	35
	Factory Default	36
	Firmware Update	37
	Logout	38

Safety Information



Important Information

NOTICE

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

PLEASE NOTE

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

About the Book



At a Glance

Document Scope

This manual describes how to configure the wireless LAN when using the SP5000 Series Open Box (hereafter referred to as “Open Box”) with the SP5000 Series Display Module wireless LAN model (hereafter referred to as “wireless LAN model”).

Validity Note

This documentation is valid for Open Box and the wireless LAN model.

The technical characteristics of the device(s) described in this manual also appear online at <http://www.pro-face.com>.

The characteristics presented in this manual should be the same as those that appear online. In line with our policy of constant improvement we may revise content over time to improve clarity and accuracy. In the event that you see a difference between the manual and online information, use the online information as your reference.

Registered Trademarks

Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Product names used in this manual may be the registered trademarks owned by the respective proprietors.

Related Documents

You can download the manuals related to Open Box and the wireless LAN model, such as the hardware manual, from our website at <http://www.pro-face.com/trans/en/manual/1001.html>.

Chapter 1

Overview

What Is in This Chapter?

This chapter contains the following topics:

Topic	Page
Introduction	10
Workflow	12
Network Authentication and Data Encryption	14

Introduction

Introduction

When using Open Box and the wireless LAN model, start up the WLAN Configuration screen from your Internet browser to define various settings for the wireless LAN connection.

You can use the wireless LAN model with either Access Point or Client mode.

Also, the **Smart Wireless Setup** is available where you can easily define wireless LAN settings.

Wireless LAN Interface Specifications

Standards	IEEE802.11b/IEEE802.11g/IEEE802.11n
Frequency bandwidth	2.4 GHz
Channel bandwidth	20 MHz
Channel	Access Point mode*1: 1...11 ch Client mode*2: ● North America US: 1...11 ch ● Japan JP: 1...13 ch ● Europe EU: 1...13 ch ● Korea KR: 1...13 ch ● China CN: 1...13 ch ● Taiwan TW: 1...11 ch
Transmission speed	IEEE802.11b: max 11 Mbps IEEE802.11g: max 54 Mbps IEEE802.11n: max 72.2 Mbps
Transmission Distance*3	Distance varies depending on application software and surrounding environment
Action mode	Client mode/Access Point mode
Communication mode	Infrastructure
Network authentication	Open, WPA-Personal, WPA2-Personal
Data encryption	WEP (128 bit) (Open)*4 AUTO/TKIP (WPA-Personal) AES (WPA2-Personal)
Maximum client connections	10*5

*1 In Access Point mode, IEEE802.11d is not supported.

*2 If the surrounding access points do not support IEEE802.11d, channels are limited from 1 to 11 ch.

*3 You can connect only from the front of the display. The connection angle and distance depend on your operating environment, applications in use, and target communication devices. Conduct an operation test, including directivity, in the operating environment before use.

*4 In Access Point mode, WEP is not supported.

*5 Request for the eleventh connection will be denied. The maximum number of connections you can have with reasonable communication performance depends on the operating environment, applications in use, and target communication devices. Conduct an operation test, including the number of connections, in the operating environment before use.

NOTE: Stealth feature is not supported.


WARNING

UNINTENDED OPERATION

- Do not use wireless communication to control machinery.
- Wireless communication system design must take into account the possibility of communication interference.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Workflow

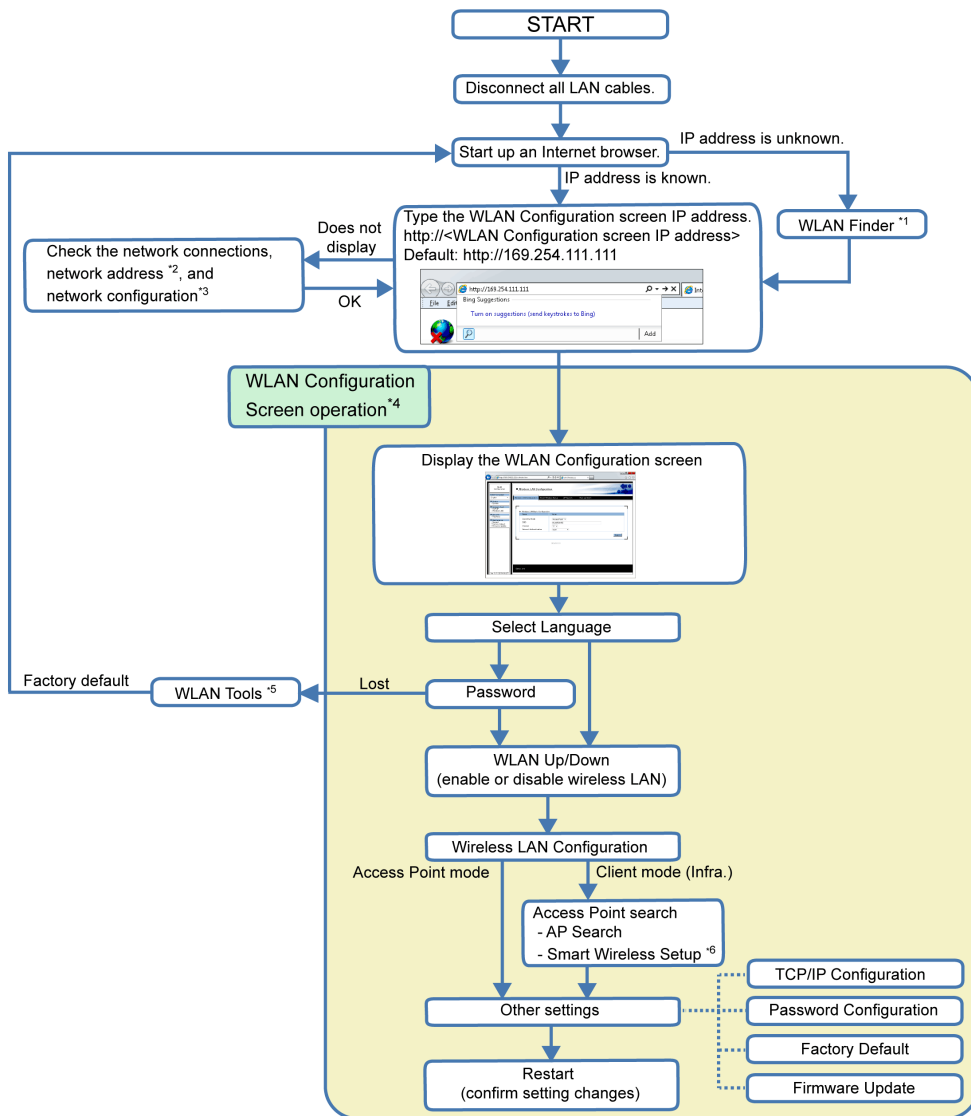

*1 If the IP address is unknown, you can use the WLAN Finder to search for the IP address. You can download the WLAN Finder from the Pro-face support site at <http://www.pro-face.com/trans/en/manual/1001.html>.

*2 Refer to Starting WLAN Configuration Screen (see page 18).

*3 If the WLAN Configuration screen does not display, even though there may not be any other issues, you should consider using the WLAN Tools to reset the wireless LAN settings to the factory default. You can download WLAN Tools from the Pro-face support site at <http://www.pro-face.com/trans/en/manual/1001.html>.

*4 For information on each wireless LAN setting screen, refer to Chapter 2, Wireless LAN Settings (see page 15).

*5 If you lose your password, you need to reset the wireless LAN settings to the factory default settings by using the WLAN Tools.

*6 When using this setting to connect over the wireless LAN with equipment from other manufacturers, use only WPS (Wi-Fi Protected Setup) supported equipment. Please note that this does not mean that all WPS-enabled products can be connected.

Network Authentication and Data Encryption

Selection of either manual setup or **Smart Wireless Setup** restricts the combination of network authentication and data encryption methods available.

Access Point Mode

Network authentication	Data encryption	Manual setup	Smart Wireless Setup
OPEN	None	✓	✓
	WEP	–	–
WPA-Personal	AUTO	✓	–
	TKIP	✓	–
	AES	–	–
WPA2-Personal	AUTO	–	–
	TKIP	–	–
	AES	✓	✓

Client Mode

Network authentication	Data encryption	Manual setup	Smart Wireless Setup
OPEN	None	✓	✓
	WEP	✓	–
WPA-Personal	AUTO	✓	✓
	TKIP	✓	✓ ^{*1}
	AES	–	✓ ^{*1}
WPA2-Personal	AUTO	–	✓ ^{*2}
	TKIP	–	✓ ^{*2}
	AES	✓	✓

^{*1} Wireless LAN Setting screen shows WPA-Personal/AUTO.

^{*2} Wireless LAN Setting screen shows WPA2-Personal/AES.

Chapter 2

Wireless LAN Settings

What Is in This Chapter?

This chapter contains the following sections:

Section	Topic	Page
2.1	IP Address	16
2.2	Starting WLAN Configuration Screen	18
2.3	Setting Menu	20

Section 2.1

IP Address

IP Address for Equipment

Overview

Before setting up a wireless LAN connection for the Open Box and wireless LAN model, understand the IP address states for the equipment below.

Access Point Mode

Open Box (number 1 in the figure below), wireless LAN module (2), and other wireless LAN clients (4) have distinct IP addresses. When using the wireless LAN model with Access Point mode, the wireless LAN module (2) and the WLAN Configuration screen (3) have the same IP address.


To set up the IP address of the Open Box (1), use the Windows® **Control Panel** on the Open Box.

To set up the same IP address for both the wireless LAN module (2) and WLAN Configuration screen (3), refer to TCP/IP Configuration (see page 25).

To set up IP addresses of other wireless LAN clients (4), use their corresponding configuration tools.

By defining the information of the wireless LAN module (2: Access Point) in the configuration tool of wireless LAN clients (4), you can set up a wireless LAN connection between the Open Box (1) and other wireless LAN clients (4).

NOTE: The network address of the Open Box (1), wireless LAN module (2), and other wireless LAN clients (4) must be the same.

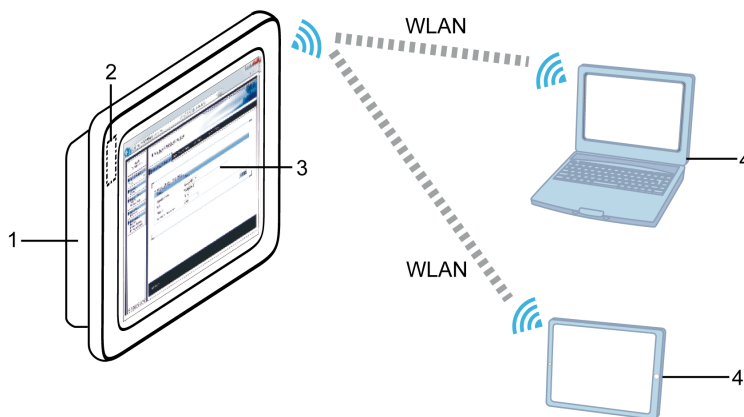

- 1 Open Box
- 2 Wireless LAN module (built into the wireless LAN model)
- 3 WLAN Configuration screen
- 4 Other wireless LAN clients

Client Mode

Open Box (number 1 in the figure below), WLAN Configuration screen (3), an external access point (4) and other wireless LAN clients (5) have distinct IP addresses. When using the wireless LAN model in Client mode, the Open Box (1) and wireless LAN module (2) have the same IP address.


To set up the same IP address for both the Open Box (1) and wireless LAN module (2), use the Windows® **Control Panel** on the Open Box.

To set up the IP address of the WLAN Configuration screen (3), refer to TCP/IP Configuration (*see page 25*).

To set up IP addresses of an external access point (4) and other wireless LAN clients (5), use their corresponding configuration tools.

By defining the information of an external access point (4: Access Point) in Wireless LAN Configuration (*see page 27*) in the WLAN Configuration screen (3) and other wireless LAN clients (5), you can set up a wireless LAN connection between the Open Box (1) and other wireless LAN clients (5).

NOTE: The network address of the Open Box (1), WLAN Configuration screen (3), an external access point (4), and other wireless LAN clients (5) must be the same.

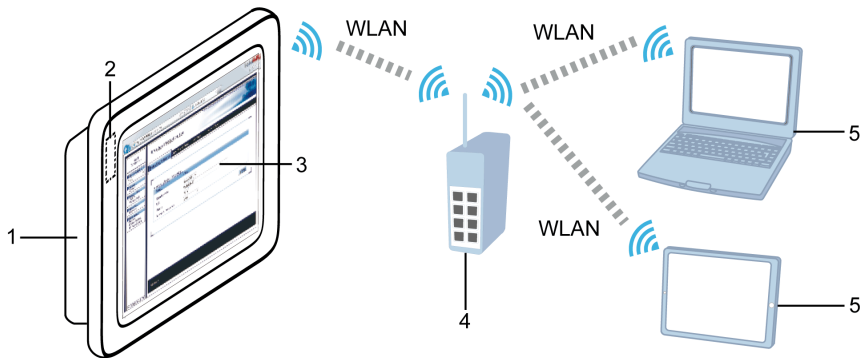



- 1 Open Box
- 2 Wireless LAN module (built into the wireless LAN model)
- 3 WLAN Configuration screen
- 4 External access point
- 5 Other wireless LAN clients

Section 2.2

Starting WLAN Configuration Screen

Startup Method

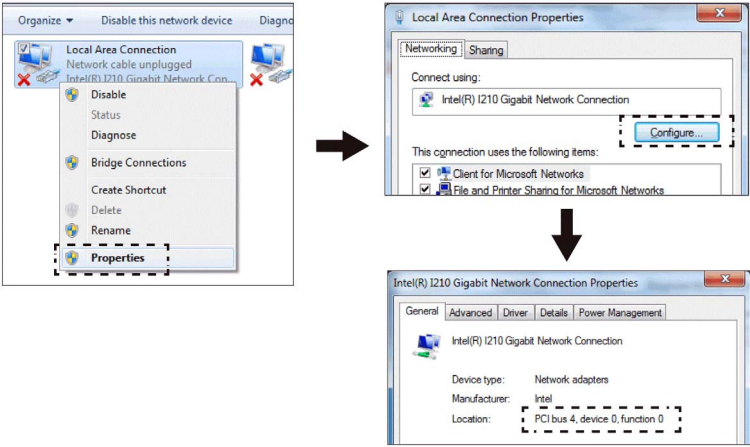Step	Action
1	Connect the Open Box and the wireless LAN model.
2	Disconnect all LAN cables.
3	Turn ON the wireless LAN model to display the Windows® desktop.
4	From the Windows® Control Panel , select Network and Internet → Network and Sharing Center → Change adapter settings .
5	For SP-5B40 On the Open Box, check that the status of the Local Area Connection property of “LAN9500A USB 2.0 to Ethernet 10/100 Adapter” (the wireless LAN network adapter) is connected. For SP-5B41 Check all the displayed Local Area Connection properties. Click Properties → Networking → Configure, and the connection showing “PCI bus 4. device 0. function 0” in the General tab's Location field is the Open Box Wireless LAN network adapter. Check that its Local Area Connection status is connected. 
6	Start up an Internet browser.

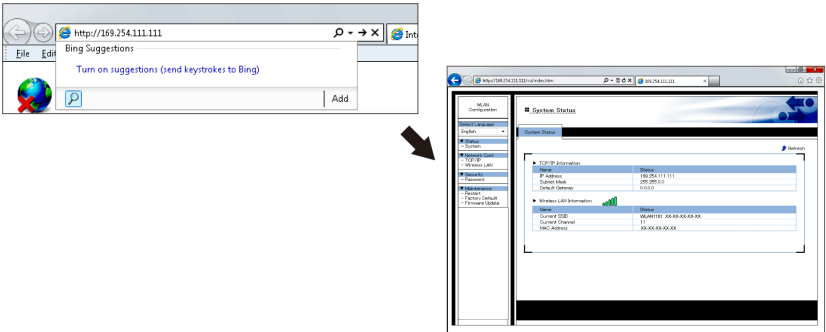Step	Action
7	In the address bar, type http://<WLAN Configuration screen IP address> (default IP address is 169.254.111.111) to display the WLAN Configuration screen.  NOTE: If the WLAN Configuration screen IP address has already been edited using TCP/IP Configuration (see page 25), enter the edited IP address. To display the WLAN Configuration screen with the new IP address, the WLAN Configuration screen and Local Area Connection network addresses must be the same. Additionally, if the edited IP address is unknown, you can use the WLAN Finder to search for a WLAN Configuration screen IP address. You can download the WLAN Finder from the Pro-face support site at http://www.pro-face.com/trans/en/manual/1001.html. Example: Emphasized part is the same <WLAN Configuration screen> IP Address: 192.168.1.1 Subnet mask: 255.255.0.0 <Local Area Connection> IP Address: 192.168.1.2 Subnet mask: 255.255.0.0

Section 2.3

Setting Menu

What Is in This Section?

This section contains the following topics:

Topic	Page
Introduction	21
Select Language	22
System Status	23
Login	24
TCP/IP Configuration	25
Wireless LAN Configuration	27
Smart Wireless Setup	29
AP Search	32
WLAN Up/Down (enable or disable wireless LAN)	33
Password Configuration	34
Restart	35
Factory Default	36
Firmware Update	37
Logout	38

Introduction


The setting menu displays on the left side of the WLAN Configuration screen. Select the menu to define the required settings.

NOTE: To enable any changes to the settings, you need to restart the Wireless LAN. After you complete changes in the WLAN Configuration screens, from the menu area click **Restart**.

<i>NOTICE</i>
EQUIPMENT DAMAGE Do not turn off this product: • While updating settings. • While this product is restarting after the firmware settings have been updated. • While resetting this product to the factory default settings. Failure to follow these instructions can result in equipment damage.


Select Language

Defines the display language. You can select either English or Japanese. The default display language is English.

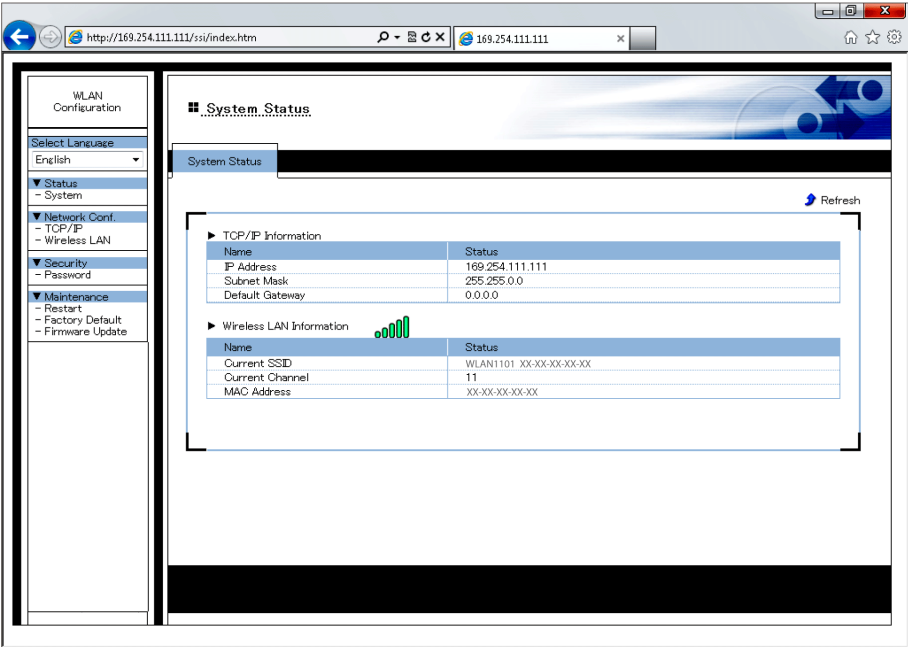

System Status

Displays the wireless LAN status.

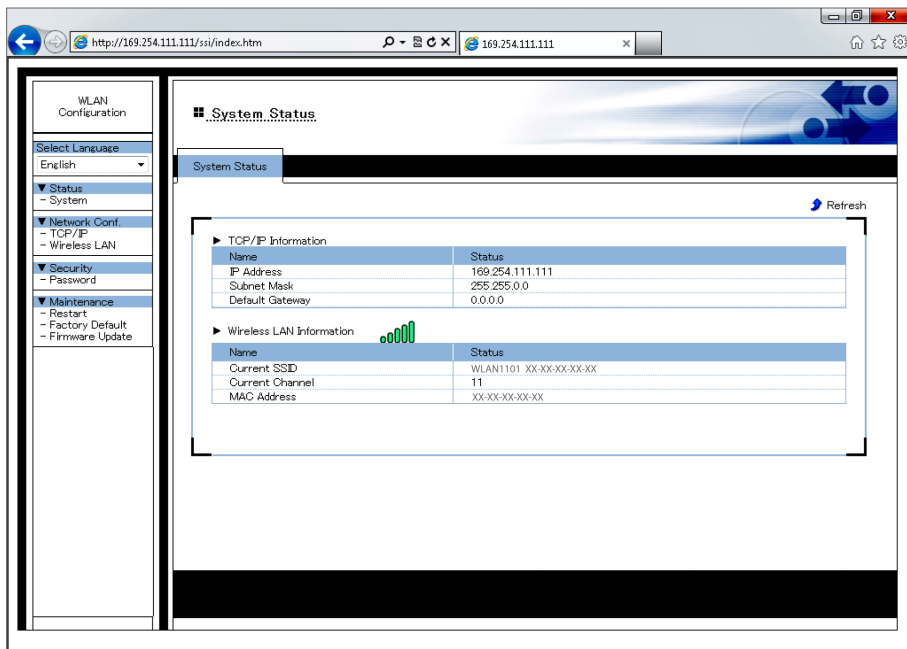

TCP/IP Information

Item	Description
IP Address	Displays the allocated IP address.
Subnet Mask	Displays the subnet mask in use.
Default Gateway	Displays the default gateway in use.

Wireless LAN Information


Item	Description
Radio signal strength	Displays the strength of the wireless radio signal, from 0% to 100%.
Current SSID	Displays the SSID and BSSID in use. When not connected to the network, nothing is displayed.
Current Channel	Displays the channel in use.
MAC Address	Displays only in Access Point mode.

Login

If a password is set up, you need to login to display the WLAN Configuration screen. From the menu select **Login**, then enter the password in the **Login** screen.

NOTE:

- For information on password settings, see Password Configuration (see page 34).
- Remember your password. If you lose your password, you need to reset the wireless LAN settings to the factory default settings by using the WLAN Tools. You can download the WLAN Tools from the Pro-face support site at <http://www.pro-face.com/trans/en/manual/1001.html>.

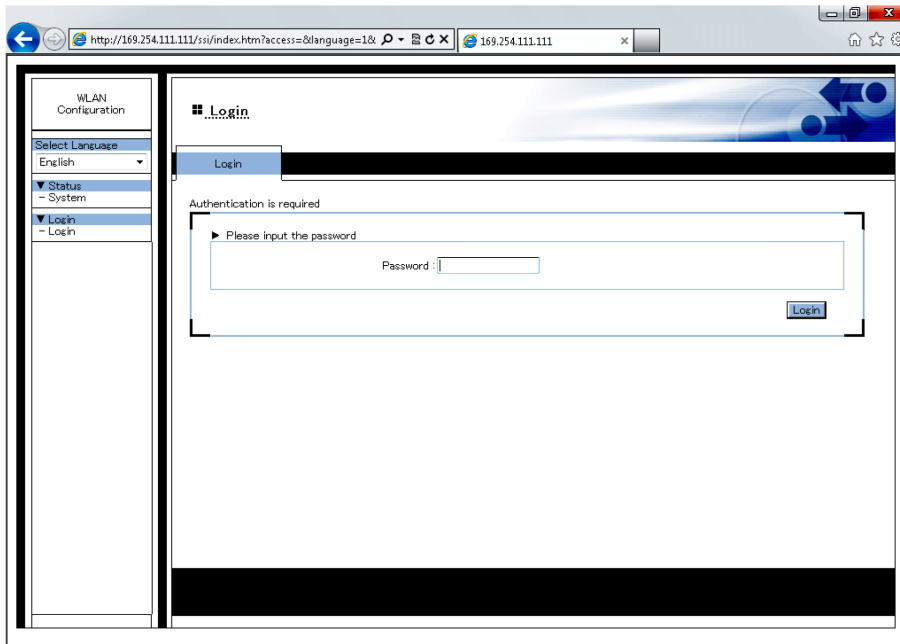

TCP/IP Configuration

Defines the TCP/IP settings. After making your changes, touch the **Submit** button.

NOTE: After making any changes, restart the wireless LAN by selecting **Restart** (see page 35).

The screenshot shows a web browser window with the URL http://169.254.111.111/ssi/index.htm?page_url=&page_id=&. The page title is "TCP/IP Configuration". On the left is a sidebar menu with "WLAN Configuration" selected. The main content area has a "TCP/IP Configuration" tab. Below it, there are two configuration sections. The first section, "TCP/IP Configuration", lists several parameters with their current values and input fields for new values. The second section, "DHCP Server Configuration", lists parameters for the DHCP server, including a toggle for "DHCP Server", IP address ranges, subnet mask, and gateway, with checkboxes to link these to the main IP settings.

Name	Current Value	Value
IP Address	169.254.111.111	169.254.111.111
Subnet Mask	255.255.0.0	255.255.0.0
Default Gateway	0.0.0.0	0.0.0.0
DNS Server (Primary)	0.0.0.0	0.0.0.0
DNS Server (Secondary)	0.0.0.0	0.0.0.0

Name	Value
DHCP Server	ON
Start IP Address	192.168.1.15
End IP Address	192.168.1.30
Subnet Mask	255.255.255.0
Default Gateway	169.254.111.111 ☒ Use the same address as "IP address".
DNS Server Address	169.254.111.111 ☒ Use the same address as "IP address".
Lease Time	10 Days 0 Hours 0 Minutes

TCP/IP Configuration

Item	Description
IP Address	Defines the IP address.
Subnet Mask	Defines the subnet mask. Enter 0.0.0.0 to automatically use the subnet mask associated with the IP address.
Default Gateway	Defines the default gateway. Enter 0.0.0.0 (default) to disable the gateway.
DNS Server (Primary)	Defines the DNS primary server.
DNS Server (Secondary)	Defines the DNS secondary server.

DHCP Server Configuration

Item	Description
DHCP Server	Enables or disables the DHCP server.
Start IP Address	Defines the start of IP addresses to allocate.
End IP Address	Defines the end of IP addresses to allocate.
Subnet Mask	Sets up the subnet mask for allocated IP addresses. Enter 0.0.0.0 (default) to automatically use the subnet mask associated with the allocated start IP addresses.
Default Gateway	Defines the default gateway. Enter 0.0.0.0 (default) to disable the gateway.

Item	Description
Use the same address as "IP address" (Automatically sets the default gateway)	Select the check box to define the default gateway with the same address as the IP Address property.
DNS Server Address	Defines the DNS server address. Enter 0.0.0.0 (default) to disable the DNS server.
Use the same address as "IP address" (Automatically sets the DNS server)	Select the check box to define the DNS server with the same address as the IP Address property.
Lease Time	Defines the lease period. The factory default setting is 10 days, 0 hours and 0 minutes. If you enter 0 days, 0 hours, and 0 minutes, it is recognized as the default 10 days.

Wireless LAN Configuration

Defines settings required for a wireless LAN connection. After making your changes, touch the **Submit** button.

NOTE: After making any changes, restart the wireless LAN by selecting **Restart** (see page 35).

Wireless LAN Basic Configuration

Item	Description
Operating Mode	Defines the connection method to the wireless LAN. You can select either [Access Point] for Access Point mode, or [Infra.] for Client mode (see page 14).
SSID	Defines the SSID for the wireless LAN.
Channel	Defines the channel used by the wireless LAN. Set up the same communication channel for equipment to communicate with one another. Available only in Access Point mode.
Network Authentication	Defines the authentication method when connecting to a wireless LAN access point.

WEP Configuration

The following is available when **Operation Mode** is [Infra.], and **Network Authentication** is [Open].

Item	Description
WEP	Turns WEP encryption ON or OFF.

The following are available when **WEP** is ON.

Item	Description
Key Index	Defines the key index for WEP encryption.
WEP Key 1	Defines the encryption key for WEP encryption.
WEP Key 2	
WEP Key 3	
WEP Key 4	

WPA/WPA2

The following are available when **Network Authentication** is either [WPA-Personal] or [WPA2-Personal].

Item	Description
Encryption Mode	Select [AUTO], [TKIP], or [AES]. NOTE: When [WPA-Personal] is selected, the default value is [TKIP]. When [WPA2-Personal] is selected, the default value is [AES].
Pre-Shared Key	Defines the key when using TKIP or AES.


Smart Wireless Setup

A simpler method to set up the wireless LAN. When running **Smart Wireless Setup**, touch the **Submit** button.

NOTE:

- When using this setting to connect over the wireless LAN with equipment from other manufacturers, use only WPS (Wi-Fi Protected Setup) supported equipment.
- After making any changes, restart the wireless LAN by selecting **Restart** (see page 35).

Access Point Mode

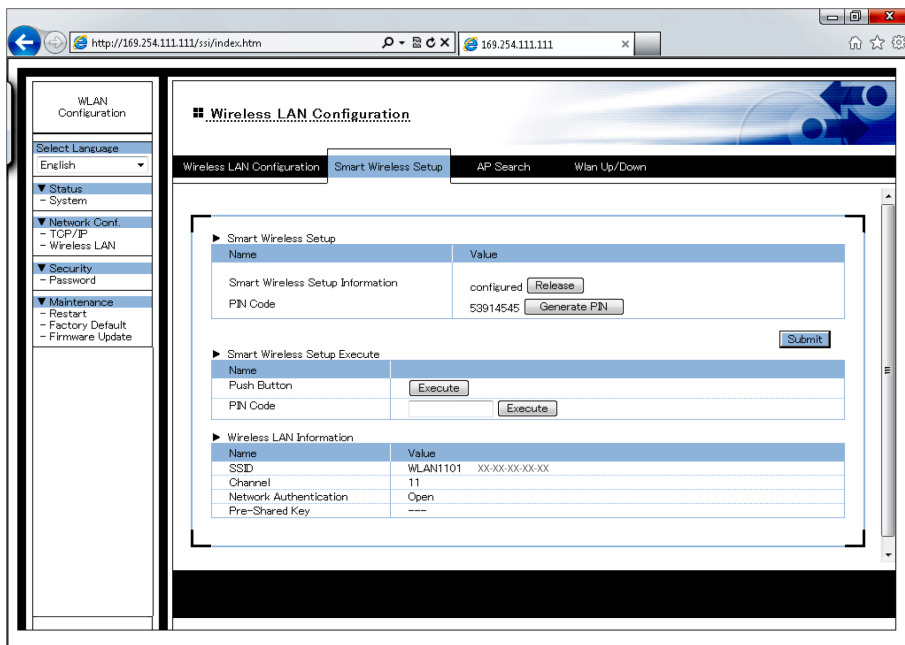

Smart Wireless Setup

Item	Description
Smart Wireless Setup Information	Displays the status of the smart wireless setup. Touch the Release button to reset to un-configured.
PIN Code	Displays the PIN code of the wireless LAN model. You can generate a new PIN code with the Generate PIN button.

Smart Wireless Setup Execute

Item	Description
Push Button	Touch the Execute button to set up the wireless LAN using the Push Button method.
PIN Code	Enter the client PIN code and touch the Execute button to set up the wireless LAN using the PIN Code method.

NOTE:

- The timeout time for this setting is about 120 seconds.
- When using the **Push Button** method to set up the wireless LAN and the push button method is run simultaneously on two or more other equipment, an error will occur.

Wireless LAN Information

Item	Description
SSID	Displays the current SSID.
Channel	Displays the current communication channel.
Network Authentication	Displays the current authentication and encryption method.
Pre-Shared Key	Displays the current pre-shared key.

Client Mode

Smart Wireless Setup

Item	Description
PIN Code	Displays the PIN code of the wireless LAN model.

Smart Wireless Setup Execute

Item	Description
Push Button	Touch the Execute button to set up the wireless LAN using the Push Button method.
PIN Code	Enter the client PIN code and touch the Execute button to set up the wireless LAN using the PIN Code method.


NOTE:

- The timeout time for this setting is about 120 seconds.
- When using the **Push Button** method to set up the wireless LAN and the push button method is run simultaneously on two or more other equipment, an error will occur.

AP Search

When in Client mode, use this function to find surrounding access points. Select the access point, enter the network key if necessary, then touch the **Submit** button.

NOTE: After making any changes, restart the wireless LAN by selecting **Restart** (see page 35).

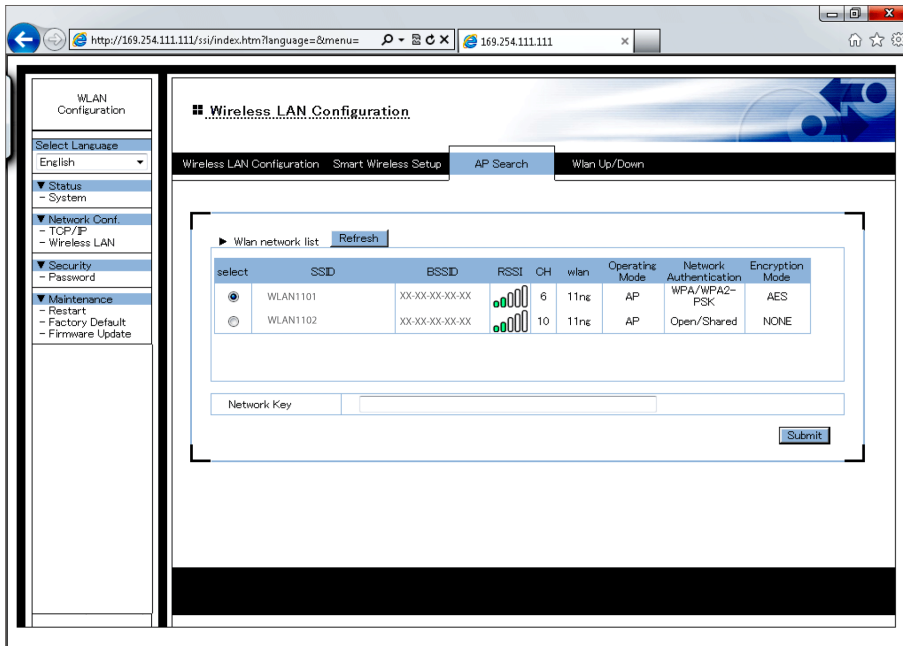


Item	Description
Refresh	Runs a search for access points.
Network Key	Enter the access point encryption key.

NOTE: The wireless LAN model does not support equipment with Shared-key authentication. Additionally, for access points identified in a search, the wireless LAN model cannot differentiate between Open authentication and Shared-key authentication. Therefore, Open authentication will be used for the access point even though it displays [Open/Shared].

WLAN Up/Down (enable or disable wireless LAN)

Enables (Uplink) or disables (Downlink) the wireless LAN network connection.

NOTE: Restart is not required to enable setting changes.

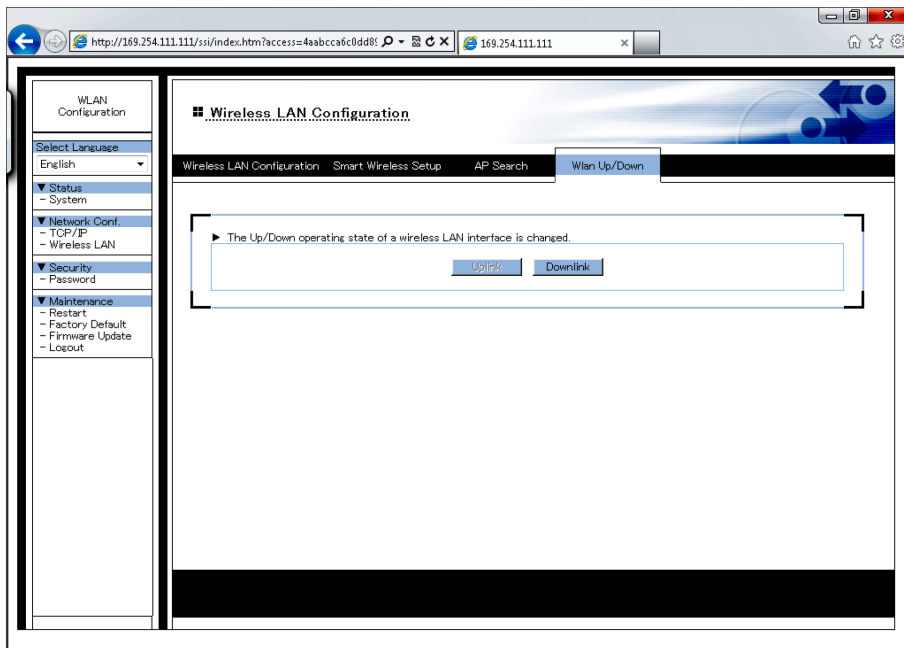

Item	Description
Uplink	Enables the wireless LAN network connection.
Downlink	Disables the wireless LAN network connection.

NOTE: A grayed out button indicates that item is selected.

Password Configuration

Set up the login password to enter the WLAN Configuration screen. After entering the password, touch the **Submit** button.

NOTE: After making any changes, restart the wireless LAN by selecting **Restart** (see page 35).


The screenshot shows a web browser window with the address bar displaying `http://169.254.111.111/ssi/index.htm?access=19fba9d520a811`. The page title is "WLAN Configuration". On the left, a sidebar menu lists various configuration options: "Select Language" (English), "Status" (System), "Network Conf." (TCP/IP, Wireless LAN), "Security" (Password), and "Maintenance" (Restart, Factory Default, Firmware Update). The main content area is titled "Password Configuration" and contains a form with the following elements:

- A header bar with the text "Password Configuration".
- A warning message: "Please keep the password confidential".
- A prompt: "Please input the password to set:".
- A text input field labeled "New Password :".
- A "Submit" button.

Item	Description
New Password	Sets up the password.


Restart

Restarts the wireless LAN. Touch the **Yes** button to restart and confirm setting changes.

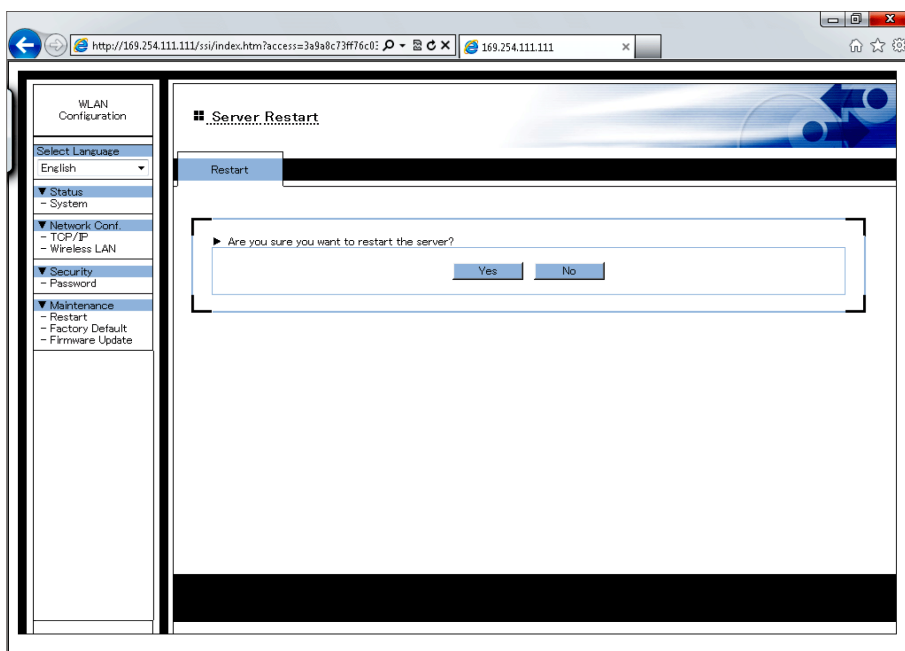

Factory Default


Returns all settings to the factory default. Touch the **Yes** button and the restart browser message will display. Touch the **Yes** button to restart the wireless LAN.

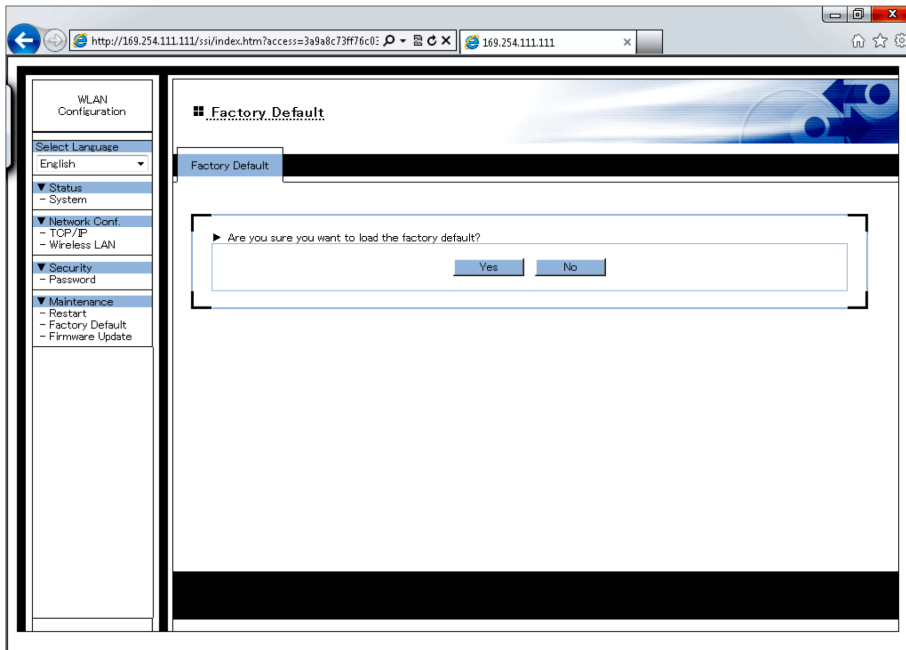

Firmware Update

Updates the firmware with the latest files on the website. Define the storage location for the downloaded firmware and touch the **Update** button.

<http://www.pro-face.com/trans/en/manual/1001.html>

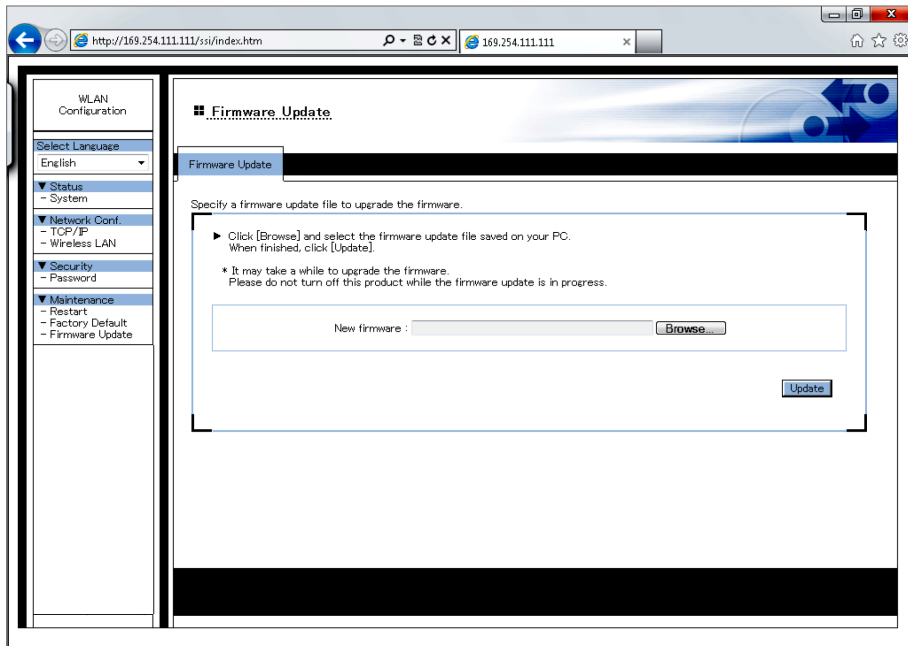

Logout

Displays only when a password is set up. Logging out returns you to the **System Status** screen.

